

 Nakamichi

DRAGON

 Dolby
ATMOS





w/ 2 x Dual-Opposing 8" Subwoofers
w/ 2 x 12" Subwoofers
w/ 4 x 12" Subwoofers



Owner's Manual

Dear Valued Owners of DRAGON,

Congratulations on bringing home the undisputed king of plug-and-play home surround sound systems!

Your faith in Nakamichi means the world to us. Half a decade ago, we had a vision: to create the ultimate home cinema solution that would live up to the DRAGON legacy.

The DRAGON Home Surround Sound System was designed around 4 pillars to fulfill that vision:

1. **Authentic 3D home cinema experience**
2. **Seamless integration with any room environment**
3. **Setup time of 30 minutes or less**
4. **Price-to-performance ratio**

DRAGON was built from scratch to deliver performance beyond the perceived limitations of plug-and-play home entertainment.

Our team is dedicated to your satisfaction, and we take your feedback and suggestions seriously. If there is anything we can do better, please do not hesitate to contact our DRAGON Concierge.

✉ : dragonconcierge@nakamichi-usa.com

☎ : +1 (415) 888 9626

Sincerely,

Rayman Cheng

Rayman Cheng, CEO of Nakamichi USA

Important Safety Instructions

DRAGON is designed and manufactured to operate within defined design limits, and misuse may result in electric shock or fire. To prevent DRAGON from being damaged, the following rules should be observed for its installation, use and maintenance. Please read the following safety instructions before operating DRAGON. Keep these instructions in a safe place for future reference.

- Read, keep and follow all instructions.
- Heed all warnings.
- Do not use DRAGON near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from DRAGON.
- Only use attachments / accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with DRAGON. When a cart is used, use caution when moving the cart / DRAGON combination to avoid injury from tipover.
- Unplug DRAGON during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when DRAGON has been damaged in any way, such as when the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into DRAGON, DRAGON has been exposed to rain or moisture, does not operate normally, or has been dropped.
- To reduce the risk of electric shock or component damage, switch off the power before connecting other components to DRAGON.
- Unplug the power cord before cleaning DRAGON. A damp cloth is sufficient for cleaning. Do not use a liquid or a spray cleaner on DRAGON. Do not use abrasive cleaners.
- Always use the accessories recommended by the manufacturer to ensure compatibility.
- When moving DRAGON from an area of low temperature to an area of high temperature, condensation may form in the housing. Wait before turning on DRAGON to avoid causing fire, electric shock, or component damage.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of DRAGON and to protect it from overheating, be sure these openings are not blocked or covered. Do not place DRAGON in a bookcase or cabinet unless proper ventilation is provided.
- Never push any objects into the slots and openings on DRAGON's enclosure. Do not place any objects on the top of DRAGON. Doing so could short circuit parts causing a fire or electric shock. Never spill liquids on DRAGON.
- When connected to a power outlet, power is always flowing into DRAGON. To totally disconnect power, unplug the power cord.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- For 12" subwoofer(s): Do not set the voltage selector switch to the wrong voltage. Doing so will result in damage not covered by warranty and could result in fire or electric shock.
- The wall socket should be located near DRAGON and be easily accessible.
- Keep DRAGON away from moisture. Do not expose DRAGON to rain or moisture. If water penetrates into DRAGON, unplug the power cord and contact your dealer. Continuous use in this case may result in fire or electric shock.
- Do not use DRAGON if an abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair DRAGON yourself.
- Avoid using dropped or damaged appliances. If DRAGON is dropped and the housing is damaged, the internal components may not function normally. Unplug the power cord immediately and contact your dealer for repair.
- Continued use of DRAGON after an abnormality occurs or if the housing is damaged may cause fire or electric shock.
- Do not install DRAGON in an area with heavy dust or high humidity. Operating DRAGON in environments with heavy dust or high humidity may cause fire or electric shock.
- Ensure that the power cord and any other cables are unplugged before moving DRAGON.
- When unplugging DRAGON, hold the power plug, not the cord. Pulling on the power cord may damage the wires inside the cord and cause fire or electric shock. When DRAGON will not be used for an extended period of time, unplug the power cord.
- To reduce risk of electric shock, do not touch the connector with wet hands.
- Insert the remote control batteries in accordance with instructions. Incorrect polarity may cause the battery to leak which can damage the remote control or injure the operator.
- The marking label of the subwoofer is located on the external bottom enclosure of the product.
- The equipment shall be used at maximum 95°F ambient temperature.
- See the important note and rating located on the back of the unit.
- **WARNING** - This equipment is not waterproof. To prevent a fire or shock hazard, do not place any container filled with liquid near the equipment (such as a vase or flower pot) or expose it to dripping, splashing, rain or moisture.
- To prevent injury, DRAGON must be securely attached to the floor / wall in accordance with the installation instructions.
- **CAUTION** - Danger of explosion or fire if batteries are mistreated. Replace only with the same or specified type.
- Do not leave the batteries exposed to direct sunlight for a long period of time with doors and windows closed. Do not disassemble the batteries or dispose of them in fire. Where the MAINS plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

WARNING: To reduce the risk of fire or electric shock, do not expose DRAGON to rain or moisture.

Important Safety Instructions



There are no user serviceable parts inside the subwoofer. Never attempt to service the subwoofer or disassemble the backplate.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert user to the presence of not isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of shock to persons.



The exclamation point within the equilateral triangle is to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.



Warning: This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



Correct disposal of this product (Waste Electrical & Electronic Equipment)

This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling help protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.



For Products That Include Batteries: Instructions for Users on Removal, Recycling and Disposal of Used Batteries.

To remove the batteries from your equipment or remote control, reverse the procedure described in the owner's manual for inserting batteries. For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers. In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste-management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

Table of Contents

1. Meet DRAGON		
Package Contents	8	
Controls & Connections	10	
2. Set Up		
Main Unit and Subwoofers	17	
Surround Speakers	20	
PerfectHeight Mechanism	21	
3. Connect		
Power on DRAGON	24	
Set up HDMI ARC/eARC with your TV	26	
Recommended Device Audio Settings	29	
Configure your TV for 4K120/8K60	30	
Video Passthrough		
Using Bluetooth® Wireless Audio	31	
4. Control		
Remote Functions	33	
Surround, Equalizer (EQ) & Night Mode (DRC)	35	
5. Personalize		
BASS and Treble	40	
Channel Configuration	41	
Subwoofer Adjustments	43	
Channel Volume Adjustments	45	
Height Channel Volume	46	
Adaptive Height Dispersion	47	
Save your Favorite Settings	48	
Using the INFO button	49	
6. On-Screen Display		
Using the OSD	52	
Audio Settings	53	
Video Settings	54	
Calibration Settings	55	
System Settings	60	
7. Surround Demo & Channel Test Tracks		63
8. Mobile Application		
Installation	66	
Functions	66	
9. Firmware Upgrade		
Check the Firmware Version	68	
Perform a Firmware Upgrade	68	
10. Reconnect Components		
Check Wireless Components	71	
Connection Status		
Re-Pairing / Pairing Modular Expansion	72	
Subwoofers		
Re-pairing Surround Speakers	75	
Re-pairing Remote Control	77	
11. Product Information		
Specifications	79	
Glossary	82	
Legal and Compliance	84	
12. Support		
Warranty Information	87	
Sound Optimization Tips	88	
Help & Troubleshooting	90	
Share Your Experience!	95	

Learn more about DRAGON's advanced functions by scanning the QR Code or visiting: bit.ly/dragon-advanced-guide

- 13.1 CONNECTING YOUR TV VIA DIGITAL OPTICAL / AUX IN**
- 13.2 EXTERNAL AUDIO OUTPUT**
- 13.3 INTEGRATE DRAGON WITH LEARNING UNIVERSAL REMOTES**




SECTION 1


MEET DRAGON

1.1 Package Contents


(i) For DRAGON with Dual-Opposing 8" Subwoofers x 2



DRAGON Main Unit x 1

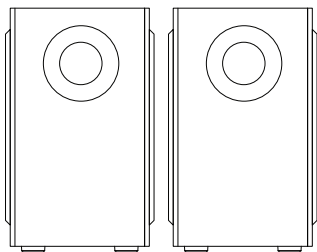

Dual-Opposing 8" Subwoofers x 2

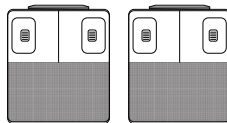

Omni-Motion
Reference Surrounds x 2



Remote Control w/
Batteries x 1




HDMI 2.1 Cable x 1
(Length: 6.5 ft)



Surround Speaker Power Cables x 2
Subwoofer Power Cables x 2
(Length: 10 ft each)



Main Unit
Power Cable x 1
(Length: 5 ft)




Main Unit Power Adapter x 1
(Length: 5 ft)


1.1 Package Contents




- (ii) For DRAGON with 12" Subwoofers x 2
- (iii) For DRAGON with 12" Subwoofers x 4




DRAGON Main Unit x 1

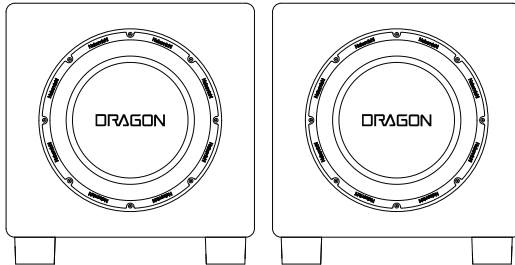

12" Subwoofers x 2
For (ii): 2 Units
For (iii): 4 Units

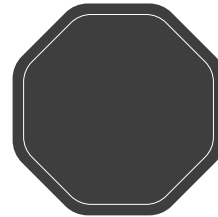

Removable Subwoofer Grille
For (ii): 2 Grilles
For (iii): 4 Grilles

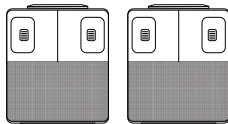

Omni-Motion
Reference Surrounds x 2




Remote Control w/
Batteries x 1



HDMI 2.1 Cable x 1
(Length: 6.5 ft)




Surround Speaker
Power Cables x 2
(Length: 10 ft each)

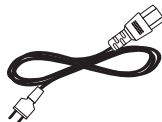

Subwoofer Power Cable
(Length: 10 ft each)
For (ii): 2 Cords
For (iii): 4 Cords




Main Unit
Power Cable x 1
(Length: 5 ft)



Main Unit Power Adapter x 1
(Length: 5 ft)

1.2 Controls & Connections

A. Main Unit

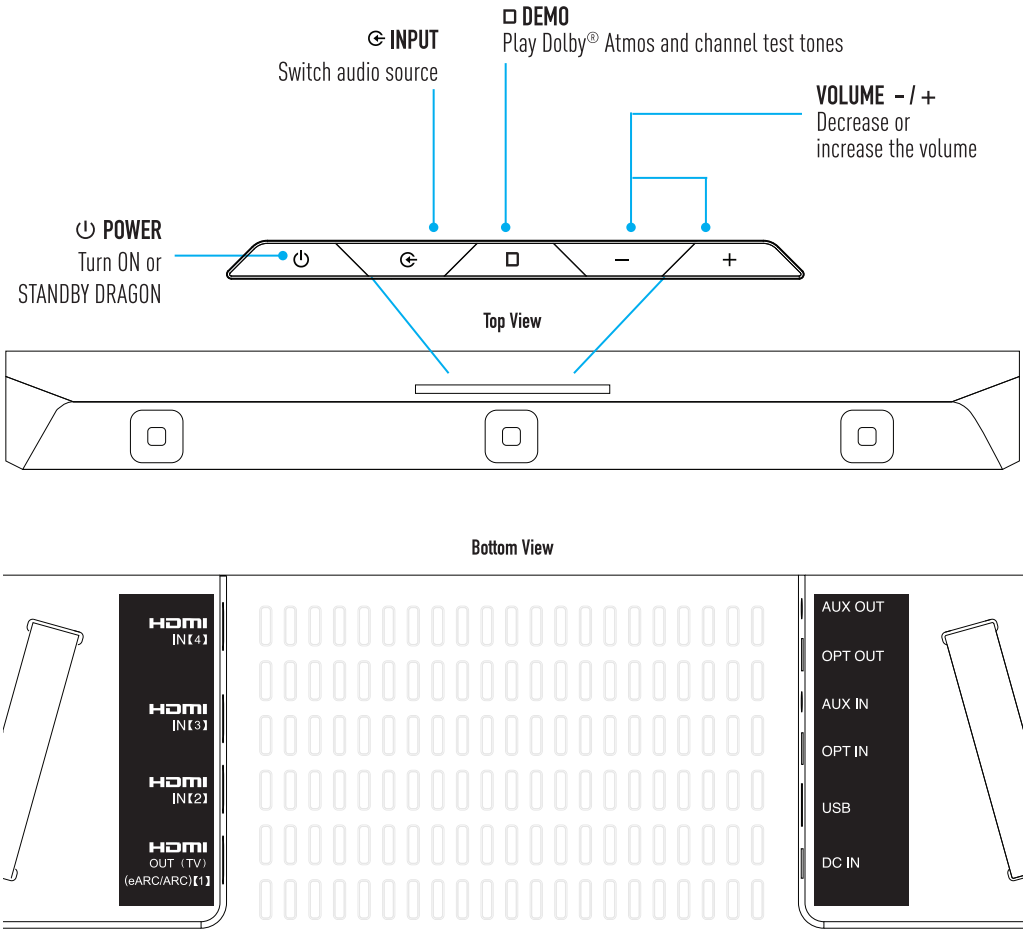

BEST

HDMI IN [2] / [3] / [4]:	HDMI 2.1 input*
HDMI Out (TV) [1]:	HDMI 2.1 output with ARC/eARC*

Aux Out	3.5mm stereo analog audio output
Opt Out	Optical audio output
Aux In	3.5mm stereo analog audio input
Opt In	Optical audio input
USB	For firmware upgrade only
DC IN	Power supply


*All the HDMI inputs and output support 4K120, 8K60, Dolby Vision, 4K HDR Passthrough, HDCP 2.3, VRR, ALLM, QFT

1.2 Controls & Connections


B(i). Dual-Opposing 8" Subwoofers x 2



Back of Subwoofers

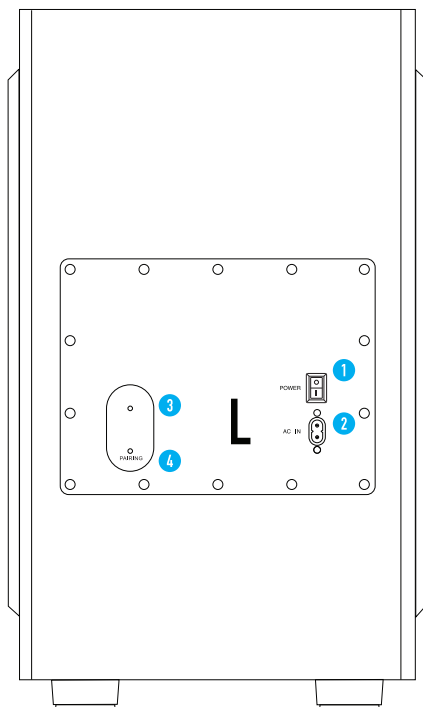

Left Subwoofer


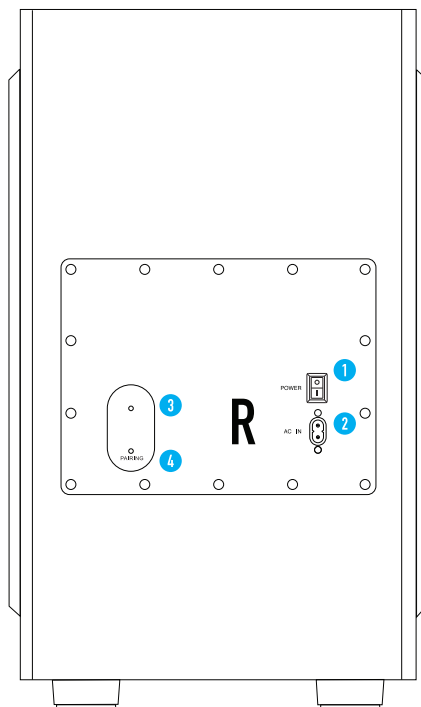


Right Subwoofer

- 1 Power Switch
- 2 Power Port
- 3 Pairing Status Indicator
- 4 Pairing Button

1.2 Controls & Connections

B(ii). 12" Subwoofer

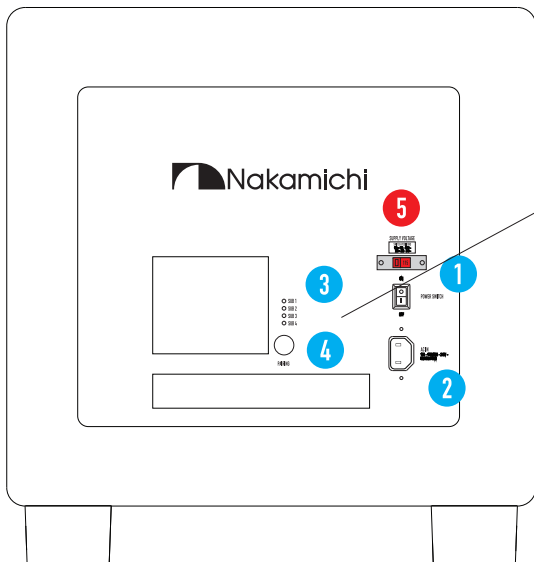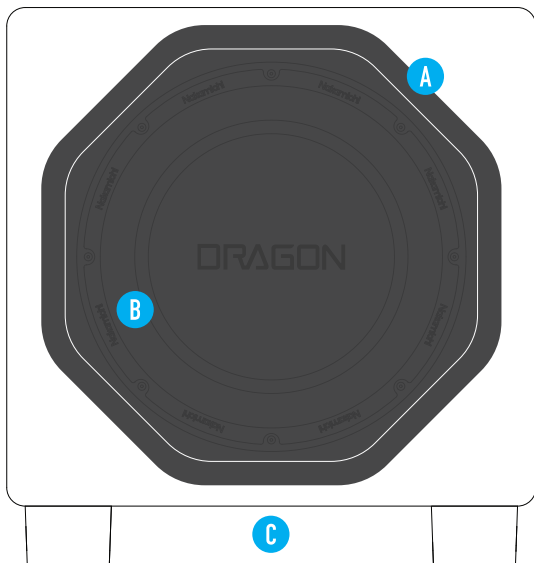


A Removable Subwoofer Grille

The grille is held in place by magnets. To remove it, gently pull it away from the unit with your fingers.

Do not use sharp objects to detach the grille.

B 12" Carbon Fiber-Reinforced Aluminum Subwoofer Driver

C 12" Carbon Passive Radiator

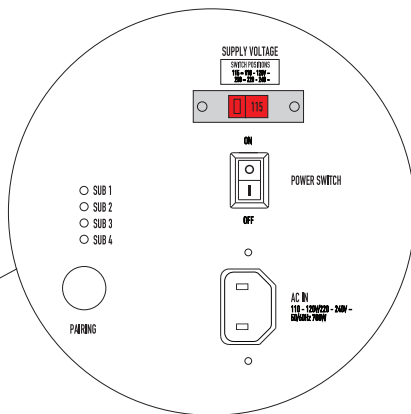

1 Power Switch

2 Power Port

3 Pairing Status Indicator

Indicates the number assigned to your subwoofer (See pg 71)

4 Pairing Button

5 Voltage Selector Switch



IMPORTANT: Residing Outside the USA?

Before connecting subwoofer to power, slide the voltage selector to the correct setting for your country.

United States: 115V (DEFAULT)


Europe / United Kingdom: 230V (Countries with 220-240V AC)

Damage resulting from incorrect voltage selection will not be covered by warranty.

1.2 Controls & Connections


C. Omni-Motion Reference Surrounds

Back of Surround Speakers

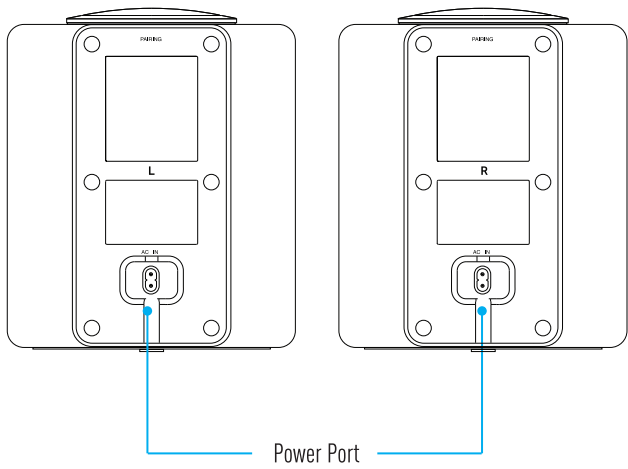

Top of Surround Speaker

Pairing Button with
Status Indicator

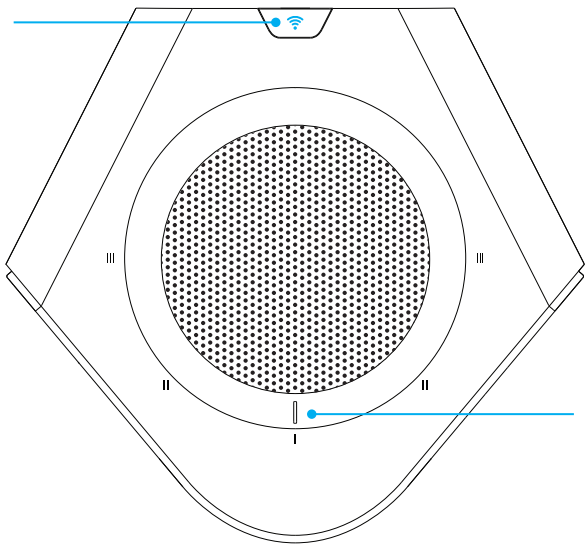

PerfectHeight
Mechanism (pg 21)


1.2 Controls & Connections

D. Remote Control

Insert Batteries before using the Remote Control (AAA Batteries x 2)

1. Gently slide the back cover in the direction indicated by the arrow until it is fully detached.
2. Insert 2 x AAA Batteries and gently push the cover back into place.

Back of Remote Control

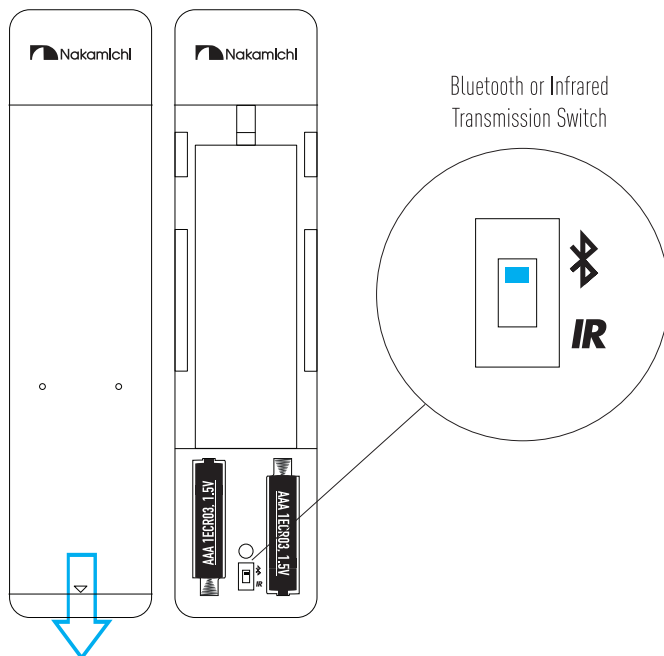

Bluetooth or Infrared Transmission Switch

Switch the remote control's transmission mode with DRAGON between Bluetooth or Infrared.



- **Bluetooth:** The default mode (recommended). Allows remote control to communicate with DRAGON without line of sight with main unit.
- **Infrared:** Use only when programming a universal remote to work with DRAGON.

Once TV HDMI connection is established, use your TV / content device's remote control to power ON the entire system. Always use your TV's remote control to power OFF the entire system.

Infrared Transmission Mode allows Learning Universal Remotes to control DRAGON. Scan QR code to access Section 13.3 for more info.






1.2 Controls & Connections

E. Optional Accessories

Pair DRAGON's main unit and surround speakers with optional mounting accessories from Nakamichi.

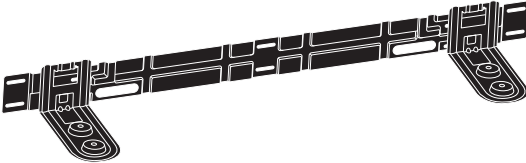Wall Mounts (Sold Separately)

	
Main Unit Wall Mount Bracket	Surround Speaker Wall Mount Bracket
Purchase your main unit wall mount here: https://bit.ly/main-unit-mount	Purchase your surround speakers wall mount here: https://bit.ly/surround-speakers-mount


 If you are unfamiliar with power tools, installation, or the layout of electrical wiring in the walls of your home, consult a professional installer.

Speaker Stands (Sold Separately)

Nakamichi recommends using **DRAGON** speaker stands for the best fit with the surround speakers.



Purchase your speaker stands here:
bit.ly/dragon-speaker-stands

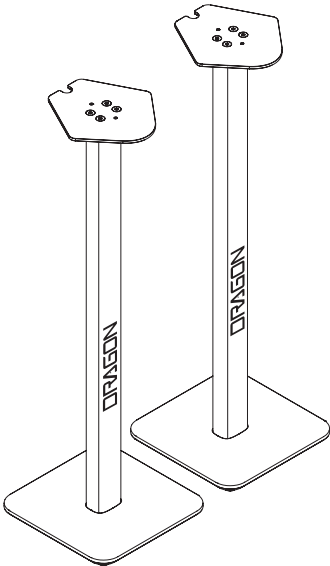

Nakamichi DRAGON Speaker Stands

SECTION 2

SET UP

2.1 Main Unit w/ Dual-Opposing 8" Subwoofers x 2





Wireless subwoofers and surround speakers provide ultimate placement flexibility that suits your listening environment.



- Refer to the back of each subwoofer to check if it is the Left or Right subwoofer.
- If you are adding a 3rd or 4th subwoofer, manual pairing is required. See section 10.2, pg 72.



BEST

i. 45° from Front Corners of Room



Allows bass frequencies to blend with front channels.
45° corner placement maximizes bass performance.



ii. Center

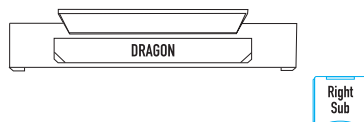



If placement (i) is not possible, move the subwoofers to other locations along the front stage, or closer to the center of the room.

ALTERNATIVE

iii. Diagonal



iv. Back of Room

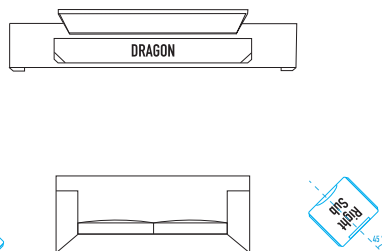

Recommended if placement (i) or (ii) is not possible in your room.



Avoid placing items on the subwoofer to prevent them from falling due to vibrations.



- DRAGON's main unit can be wall mounted with our optional, custom designed wall bracket. See Section 1.2E, pg 15.
- Do not block the vents at the rear and bottom of the main unit. These vents are essential for performance. Leave a minimum of an inch of gap around these ventilation holes.
- Wireless antennas are built into the main unit and wireless subwoofers. Keep all speaker units away from water and metal objects.
- For optimal bass performance, leave a few inches of gap around the subwoofer ports and grilles.
- If bass performance seems too overpowering, refer to Section 12.2, pg 88 to optimize DRAGON for your room acoustics.

2.1 Main Unit w/ 12" Subwoofers x 2



For Dual 12"


Wireless subwoofers and surround speakers provide ultimate placement flexibility that suits your listening environment.



If you are adding a 3rd or 4th subwoofer, manual pairing is required.



BEST

i. Front Corners of Room



Allows bass frequencies to blend with front channels.


ii. Center

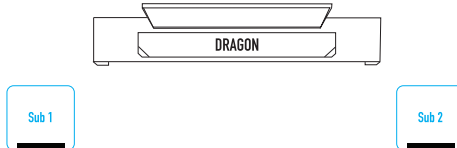


If placement (i) is not possible, move the subwoofers to other locations along the front stage, or closer to the center of the room.

ALTERNATIVE

iii. Diagonal



iv. Back of Room



Recommended if placement (i) or (ii) is not possible in your room.



Avoid placing items on the subwoofer to prevent them from falling due to vibrations.




- DRAGON's main unit can be wall mounted with our optional, custom designed wall bracket. See Section 1.2E, pg 15.
- Do not block the vents at the rear and bottom of the main unit. These vents are essential for performance. Leave a minimum of an inch of gap around these ventilation holes.
- Wireless antennas are built into the main unit and wireless subwoofers. Keep all speaker units away from water and metal objects.
- For optimal bass performance, leave a few inches of gap around the subwoofer ports and grilles.
- If bass performance seems too overpowering, refer to Section 12.2, pg 88 to optimize DRAGON for your room acoustics.

2.1 Main Unit w/ 12" Subwoofers x 4



For Quad 12"



Wireless subwoofers and surround speakers provide ultimate placement flexibility that suits your listening environment.

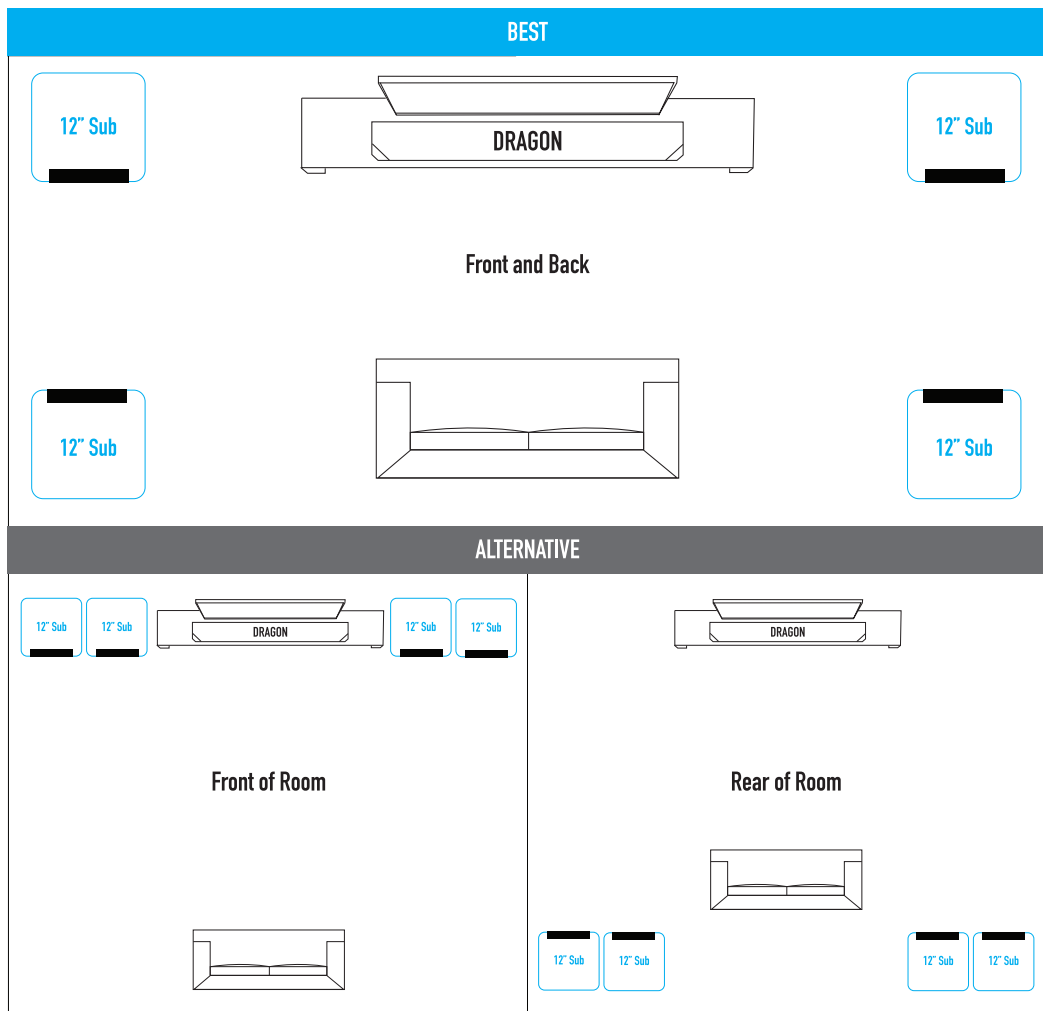


Avoid placing items on the subwoofer to prevent them from falling due to vibrations.

2.2 Surround Speakers

 Refer to the back of each surround speaker to check if it is the Left or Right surround speaker.

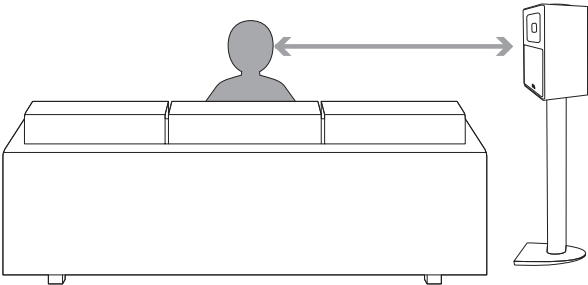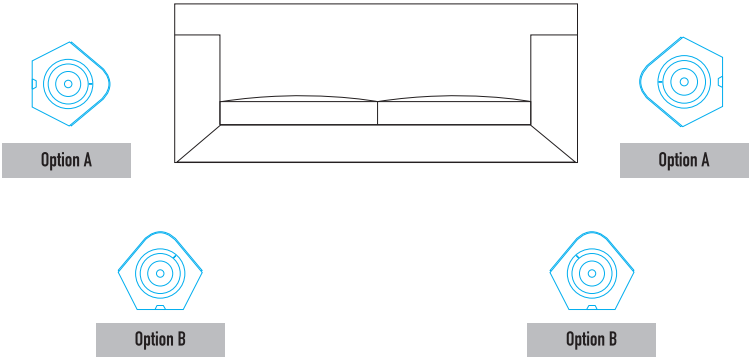

Note: Illustration is not to scale. Speaker stands are not included.

-  The bottom speaker driver of each surround speaker should be at ear level.
- Wireless antennas are built into each wireless speaker. Keep all speakers away from fish tanks, water and metal objects.

Purchase optional speaker stands and wall mounts customized for DRAGON here:
bit.ly/dragon-speaker-stands




2.3 PerfectHeight Mechanism

A. Setting PerfectHeight

The PerfectHeight Mechanism is an innovation developed by Nakamichi that allows height effects to be directed towards the listener, regardless of placement, room shape or seating position.



Setting PerfectHeight


Rotate the adjustable PerfectHeight Mechanism so that the position marker points towards the listening area.

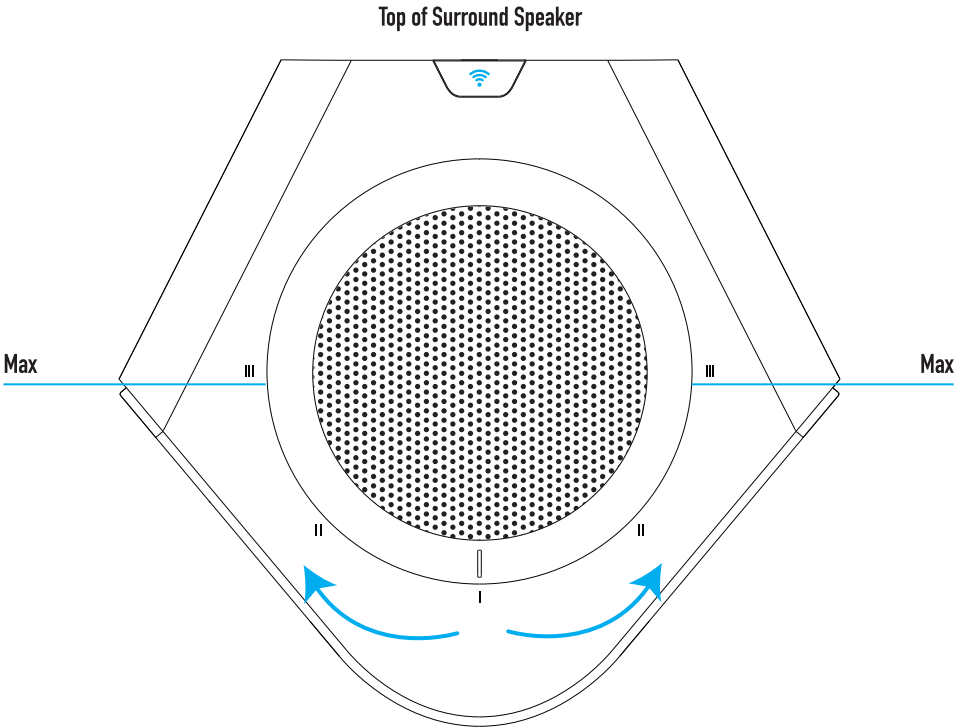

2.3 PerfectHeight Mechanism

B. Reference Placement
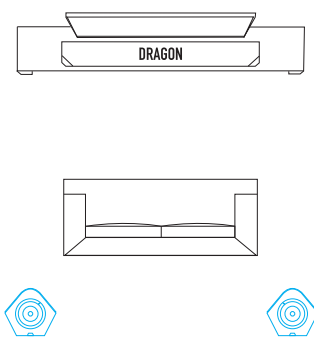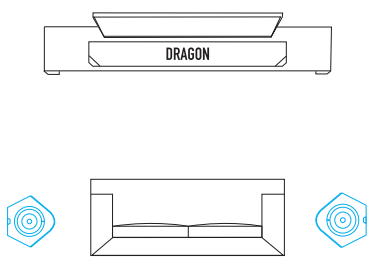
<p>Placement 1: Back of Couch</p> <p>Recommended position marker: Position II</p> 	<p>Placement 2: Side of Couch</p> <p>Recommended position marker: Position I (Default)</p> 
--	---

 The PerfectHeight Mechanism is designed to be rotated **up to 90°** from its default position. Do not force or twist the mechanism beyond its designed range of movement.


 Does your room have uneven ceilings? Optimize height channel balance by referring to Section 12.2, pg 89.

SECTION 3


CONNECT

3.1 Power On DRAGON

1. Connect power to both subwoofers. Toggle the power switch to "ON" position.

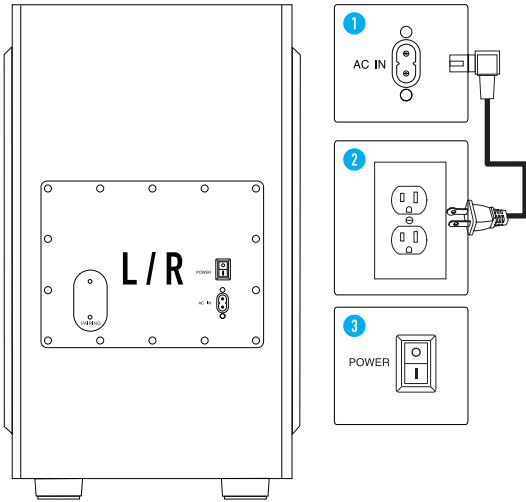

Dual-Opposing 8" Subwoofer

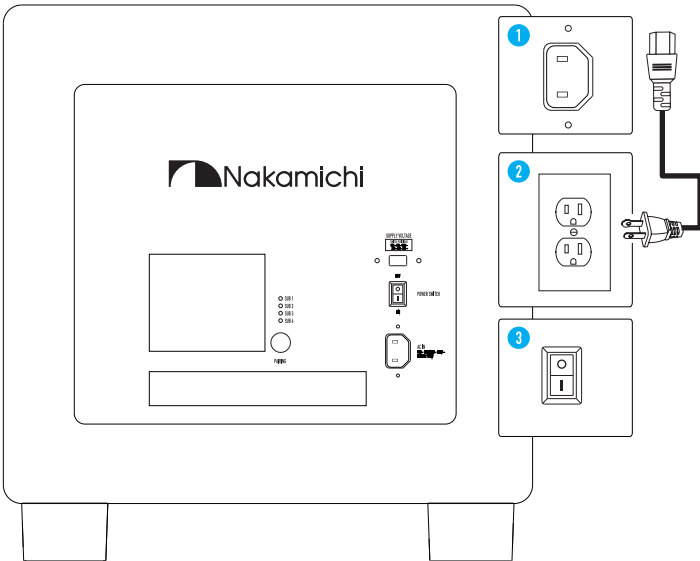


12" Subwoofer


3.1 Power On DRAGON

2. Connect power to both surround speakers.


Note: No power switch for surround speakers.

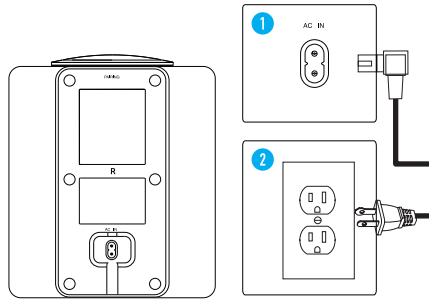

3. Connect power to the main unit (Bottom).

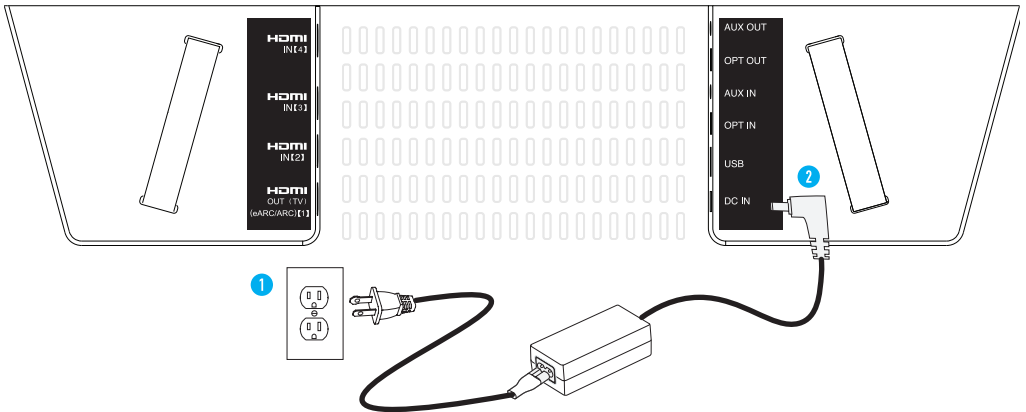


4. The subwoofers and surround speakers power on and off automatically with the main unit.


 Once the main unit is powered off, the subwoofers and surround speakers will go into standby mode. You do not need to turn off the subwoofers and surround speakers after each use.


3.2 Set up HDMI ARC/eARC with your TV

A. Establishing a Connection

Using the **Nakamichi HDMI 2.1 cable**, connect **DRAGON** to your TV's **HDMI IN (ARC/eARC)** port.

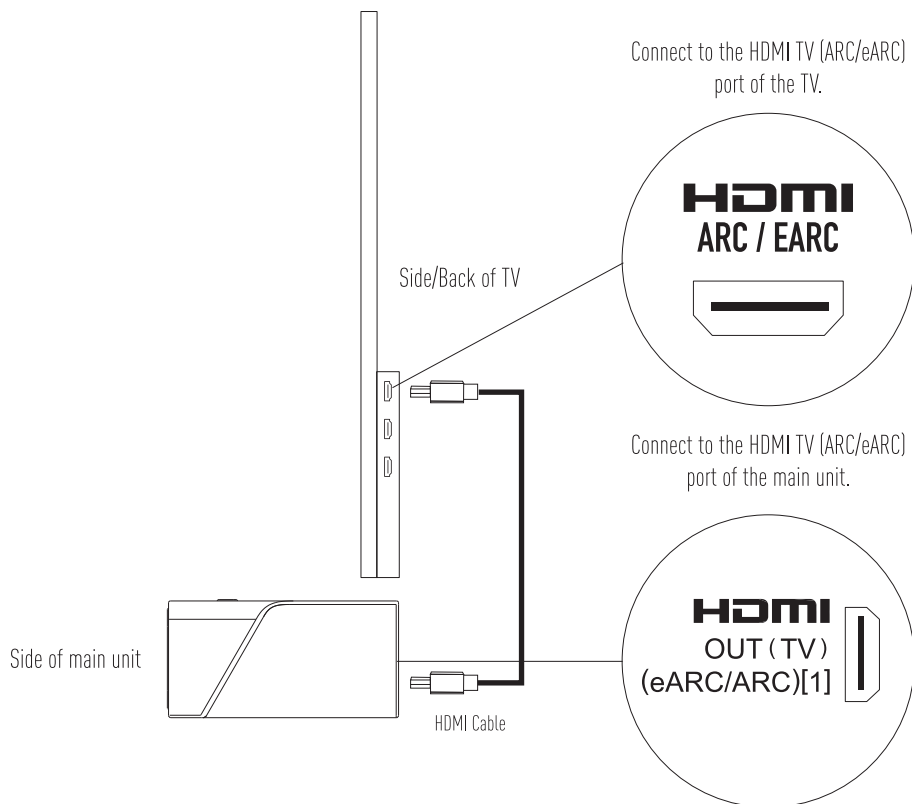

 HDMI Audio Return Channel (ARC)/enhanced Audio Return Channel (eARC) offers two-way communication between your audio system and TV over a single HDMI connection. Essentially, HDMI ARC/eARC enables a single TV's HDMI port to function as both a video input and audio output.

 eARC supports advanced audio formats, including Dolby Atmos TrueHD and Dolby Atmos Digital Plus™.

 **Do not connect DRAGON to a TV via Bluetooth.** Bluetooth audio connections are unable to deliver surround sound to sound systems and will degrade overall sound quality.

3.2 Set up HDMI ARC/eARC with your TV

B. Audio Settings for TV

Configure your TV's audio settings for optimal surround sound output to DRAGON.

Setting the audio output:

- Go to Settings > Sound.
- Select Speaker Settings. Set to HDMI Audio Out.
- For eARC equipped TVs, check your TV settings and turn on eARC mode if available. This might be found under the advanced/expert options of your TV.

Setting the audio format:

- Go to Settings > Sound > Additional Settings.
- Select Speaker Audio Format.
- Set as Dolby Digital / DTS / Bitstream (whichever is available).



For brand specific TV audio settings, scan QR code or visit:
bit.ly/dragon-best-sound

C. Set Up Control Communication Between DRAGON and TV

CEC is an HDMI protocol that allows the TV to control DRAGON's functions (e.g. power, volume, source selection) via a single TV remote.

Requirements

1. Your TV is CEC enabled (Check with your TV manufacturer for more information).
2. DRAGON and TV are connected via a HDMI cable through the ARC/eARC ports.

Enabling CEC

- From the TV's SYSTEM menu, enable CEC^ and ARC^ functions.
- From the CEC menu, select Device Discovery to register DRAGON with the TV.
- Enable CEC for TV only. Do not enable CEC for other device sources or inputs may switch randomly.
- To disable CEC on DRAGON, see pg 54 (Disabling HDMI CEC One Touch Play).

* Steps may differ based on TV brand. Refer to your TV's user manual for more information.

^ HDMI-CEC TV trade names: Samsung (Anynet+), LG (SIMPLINK), Vizio (CEC), Sony (Bravia Sync), TCL (CEC), Hisense (CEC), Philips (EasyLink), Sharp (Aquos Link), Panasonic (HDAVI Control / EZ Sync / Viera Link). Naming may differ based on TV brand. Refer to your TV's user manual for more information.

Disclaimer: All brand names on this page belong to their respective copyright holders, and are used for non-profit, informational purposes only.

Visit **bit.ly/dragon-best-sound** for expanded list of TVs' audio settings instructions. Visit **bit.ly/dragon-hdmi-cec-settings** or scan QR Code for HDMI-CEC setup instructions by device.

If your devices are not listed on our website, please check with the device manufacturer's manual.




3.2 Set up HDMI ARC/eARC with your TV

D. Connecting Content Devices

Use our Perfect Device Matching Tool to create a custom setup guide based on your TV and devices. Scan QR code or visit bit.ly/dragon-perfect-device-matching



Using a TV without HDMI eARC/ARC? Scan this QR code to learn how to connect your TV to DRAGON. bit.ly/dragon-optical

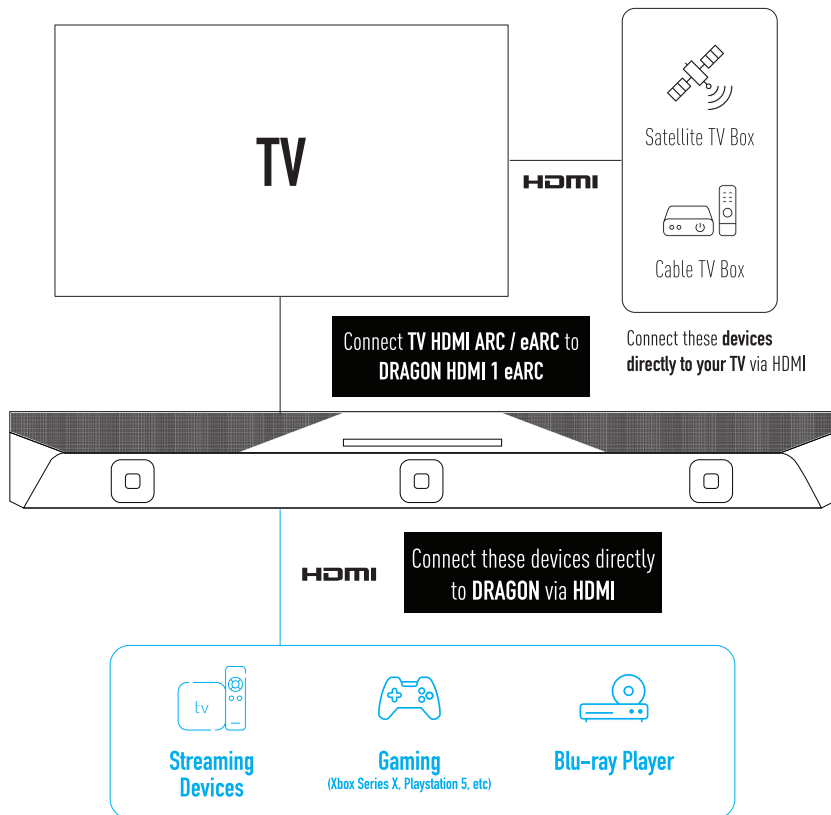

 HDMI cables transmit both audio and video. To view video from devices connected to the audio system, turn DRAGON on, then set the audio system input to HDMI 2, 3 or 4. Set your TV input to the HDMI ARC / eARC port which DRAGON is connected to.

Switch the DRAGON's source to TV when playing from the TV's built in streaming apps, or audio from devices connected to the TV. Audio passthrough is done using TV's ARC/eARC connection. Dolby TrueHD and DTS:X audio are not supported on ARC connection.


Connect devices with the same HDCP standards for seamless switching between sources. If there are devices with different HDCP standards, connect all HDCP 2.3 devices to DRAGON while connecting HDCP 1.4 devices to TV to avoid audio and video instability.

3.4 Recommended Device Audio Settings

With new devices constantly emerging and device configurations continuously evolving, access our recommended settings for each device by scanning the QR codes below.

Device	QR Code	Device	QR Code
Apple TV		Amazon Fire Stick / Fire Cube Streaming Devices	
Roku Premiere		Roku Ultra 4K	
Nvidia SHIELD PRO 4K		PlayStation 5	
XBOX Series X		Nintendo Switch	
Sony Blu-ray Player		DIRECTV™	
DISH NETWORK		Xfinity TV Box	

For other devices, scan the QR code or visit:
bit.ly/dragon-best-sound



3.5 Configure your TV for 4K120/8K60 Video Passthrough

Proceed with this only if a HDMI device that supports 4K120/8K60 (e.g. Gaming Console) is connected to DRAGON.

Tip: 4K120Hz/8K60 video passthrough typically needs to be activated manually through your TV's video settings. Visit our Helpdesk to discover and apply optimized settings for your TV.



General guide to enable 4K120/8K60 video passthrough on your TV*:

- Go to Settings > Video.
- Select External Inputs > HDMI Signal Format.
- For the HDMI eARC port which DRAGON is connected to, either change the setting to "HDMI 2.1" or "Enhanced". Alternatively, look for "Game Mode" on the TV and switch it to "Auto/On".

*Feature is only available on select TVs that support 4K120/8K60 input.

3.6 Using Bluetooth® Wireless Audio

A. Bluetooth 5.0 with aptX™ HD

Stream music wirelessly from your favorite devices via Bluetooth (⌘/BT) with Qualcomm aptX™ HD. aptX™ HD enables Bluetooth to transmit audio at a maximum bitrate up to 1.8× higher than standard Bluetooth codecs, enabling 24-bit high-resolution audio to be transmitted wirelessly.

Bluetooth 5.0 also brings meaningful improvements to wireless stability, allowing your favorite devices to stream audio content to DRAGON at further distances than previous Bluetooth protocols.

Best Transmission: If you hear any break-up or disconnect while streaming music from your device, move the source device closer to DRAGON.

Note: DRAGON will automatically be switched to ALL CHANNEL STEREO mode and Music 1 EQ when in Bluetooth mode.

B. Bluetooth Connection

Switch DRAGON to Bluetooth mode:

Press the Bluetooth (⌘) button once.

Pairing DRAGON with a Bluetooth device:

1. Set your Bluetooth device into Bluetooth pairing mode (to make it discoverable).
2. Press and hold the Bluetooth (⌘) button on the remote control until the LED display on the main unit shows "PAIRING".
3. "BT" will start flashing on DRAGON's display. You can now search for DRAGON on your Bluetooth device, and pair/connect to it. For more information, refer to the user documentation of your device. "BT" will stop flashing and display constantly on the main unit display when successful connection has been established.
4. Play audio from your Bluetooth device. Volume can be controlled via your source device or DRAGON's remote control.

Note: Whenever DRAGON is switched to Bluetooth mode, it will attempt to reconnect with the last device it was paired to.

To disconnect DRAGON from a paired Bluetooth device:

1. Press and hold the ⌘ button on the remote control until "PAIRING" is shown on DRAGON's LED display.
2. Then, "BT" will start flashing on DRAGON's display. DRAGON is now ready to pair with a new device.



DRAGON is not equipped with a microphone, so it cannot operate as a hands-free device.



Reduce the volume levels on DRAGON and your devices before playing audio content. High volume levels can damage your hearing.

To pair DRAGON with voice assistants like Google Home or Amazon Alexa, scan QR code on the right or visit the link:
bit.ly/dragon-va-pairing



SECTION 4

CONTROL

4.1 Remote Functions

A. Remote Functions at a Glance

⏻ Power ON/OFF DRAGON

After setting up a HDMI connection with your TV, always power on DRAGON by using your TV or content device's remote control power ON button. Always use your TV's remote control to power OFF the entire system.

OUTPUT: Plays audio content using external devices connected to DRAGON's Optical/Aux Out. DRAGON will be muted (Section 13.2).

Press "ALL CH STEREO" when listening to stereo content (e.g. music).

All Channel Stereo (Recommended):

Upmixes stereo playback to surround speakers. Best for music, YouTube™ and content with minimal rear surround effects.

Stereo Only: Enables playback with main unit + subwoofers only (no surround).

■ INFO button and Navigation:

Displays essential info on TV screen and DRAGON's LED display (pg 49-50).

HOME: Access On-Screen Display (OSD) Settings. Use ▲▼▶◀ to navigate OSD menu (pg 52).


When OSD is not active:

Bluetooth playback controls.



Favorite Settings 1 and 2

Save and load personalized settings. See Section 5.7, pg 48 for details.

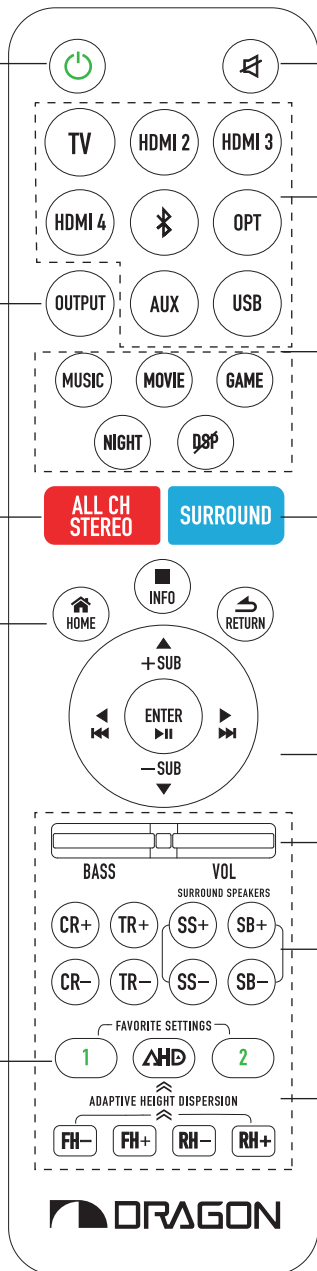

Mute or Unmute DRAGON.

Input Sources

Press "TV" to listen to audio from devices connected to TV or streaming apps built into TV (via ARC / eARC).

For other devices connected to DRAGON, press "HDMI 2 / 3 / 4 / Bluetooth / Optical / Aux".

Equalizer & Night Mode

Experience audio equalizers tailored for various content (Section 4.2B, pg 37).

Press SURROUND when watching Dolby, DTS or Multi-Channel PCM content for a full surround with height experience.

► **DOLBY Surround:** For Dolby/LPCM/PCM audio

◄ **DTS Neural:X:** For DTS audio.

STUDIO: Side surround speakers in the main unit are used to enhance the left and right channels, creating a powerful front presence.

DTS DIRECT / NATIVE: Directly decodes 2.1 / 5.1 / 7.1 channel without upmixing. (See Section 4.2A, pg 35 for more details)

Subwoofers, Tonal & Surround Adjustments

Enable more (▲ +SUB) or fewer (▼ -SUB) subwoofers.

Bass, Master Volume: Push the buttons up or down to adjust the levels.

Center (CR), Treble (TR), Surround Side (SS), Surround Back (SB), Front Height (FH) and Rear Height (RH) Channel Volume. See (Section 5.1-5.5, pg 40-46) for more details.


AHD: Configure DRAGON's proprietary technology for enhanced height effects. See Section 5.6, pg 47 for details.

For expanded remote control guide, scan QR code or visit: bit.ly/dragon-remote-guide

4.1 Remote Functions

B. Selecting Different Input Sources

Press one of these buttons to select an input source.
Each input source will be displayed on the main unit's front LED display.

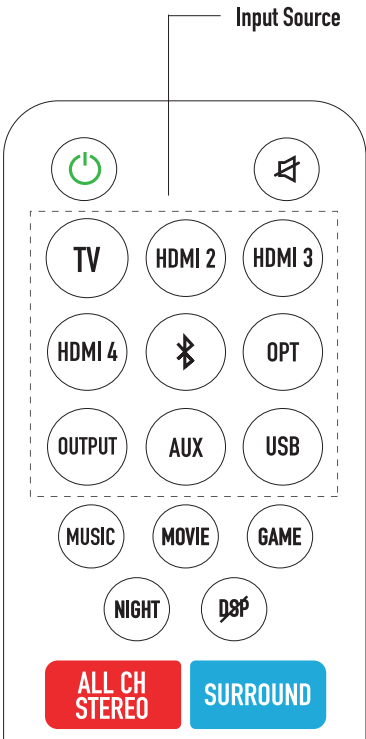

Button	LED Display
TV	TV
HDMI 2	HDMI 2
HDMI 3	HDMI 3
HDMI 4	HDMI 4
OPT (Optical)	OPTICAL
Bluetooth	BT
AUX (Auxiliary / 3.5mm Stereo input)	AUX

4.2 Surround, Equalizer (EQ) & Night Mode (DRC)


A. Surround Mode

Channel mapping / upmixing is essential because most content is not encoded in 11.x.6 channels. DRAGON utilizes different channel mapping methods to optimize your listening experience. Dolby and DTS employ their proprietary upmixing technologies to decode and optimize content.




SURROUND Button

Dolby Upmixing (for Dolby Digital / Dolby Digital Plus / Dolby TrueHD / Dolby Atmos and LPCM 7.1 / LPCM 5.1 / PCM content)

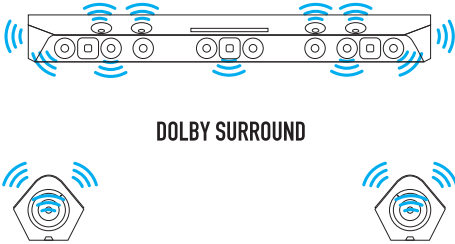Upmixing	Description
Dolby Surround (Default)	<p>Dolby technology will upmix audio content to all audio channels with vertical surround effects.</p>  <p>DOLBY SURROUND</p>
Native*	<p>Dolby/PCM/LPCM content is directly decoded without audio upmixing.</p>

DTS Upmixing (for DTS / DTS-HD / DTS-HD MA / DTS:X content)

Note: When playing Dolby or PCM content, it is not possible to select DTS modes.

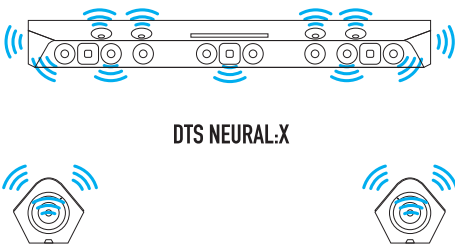DTS Neural:X (Default)	<p>DTS Neural:X technology will upmix most DTS encoded audio content to all audio channels with vertical surround effects**.</p> <p>DTS:X content will be decoded and upmixed to DTS:X PRO.</p>  <p>DTS NEURAL:X</p>
DTS Direct / Native*	<p>DTS content is directly decoded without audio upmixing.</p>


* In Native mode, some channels will not produce sound.

** For more information about DTS Neural:X, view the Glossary (Section 11.2, pg 82).

4.2 Surround, Equalizer (EQ) & Night Mode (DRC)



A. Surround Mode

Studio Mode
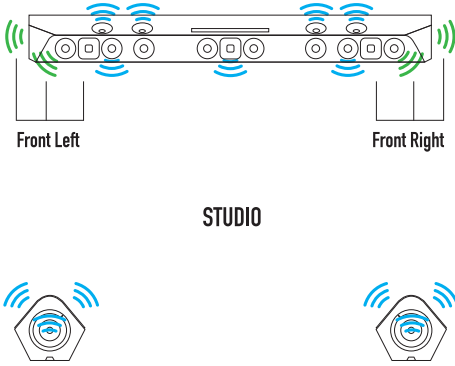
<div>Studio</div>	<p>Studio mode uses the same channel upmixing fundamentals as Dolby Surround and DTS Neural:X.</p> <p>The only difference is that the side surround speakers in the main unit are repurposed into Left and Right channels. In this mode, the Left and Right channels are powered by 4 speaker drivers and an AMT tweeter on each side, creating a powerful front soundstage.</p>	
-------------------	---	--


ALL CH
STEREO

 Button
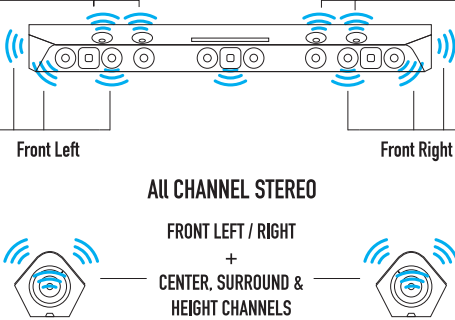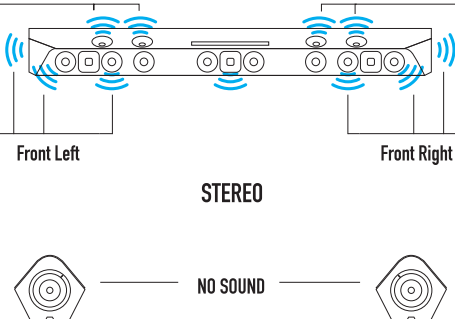
<div>All Channel Stereo</div>	<p>Left, Right and Center channel signals (if available) are upmixed and transmitted to the surround speakers to boost rear surround output.</p>	
<div>Stereo</div>	<p>Enables stereo playback using all speakers in the main unit.</p>	

4.2 Surround, Equalizer (EQ) & Night Mode (DRC)

B. Equalizer (Audio Presets and Night Mode)

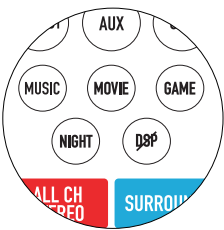


Button	Equalizer Mode (Shown on Display/OSD)	Description
Music (Default: Music 1)	Music 1	Front-row concert listening experience. Enjoy maximum punch and sound pressure level (loudness).
	Music 2	Optimizes between sound pressure level (loudness) and dynamic range.
	Music 3	Prioritize music details and dynamic range over volume. More vibrant, spacious and natural sounding.
Movie (Default: Movie 2)	Movie 1	Experience a thrilling environment that puts you in the center of the action. Enjoy maximum intensity and sound pressure level (loudness).
	Movie 2	Optimizes between sound pressure level (loudness) and dynamic range. Feel greater immersion, depth and clarity.
	Movie 3	Prioritize movie details and dynamic range over volume. More vibrant, spacious and natural sounding.
Game	Game	Experience enhanced depth and spaciousness from surround sound effects of all game genres.
	News	Feel like you are seated at the front row of a live talk show. Hear crystal clear dialog.
	Sports	Experience the energetic environment of live sports broadcasts. Hear the commentator's voice take center stage, while sounds that fill the stadium surround you.
DSP OFF	DSP OFF	Audio playback without using any predefined Nakamichi EQ setting.

4.2 Surround, Equalizer (EQ) & Night Mode (DRC)

B. Equalizer (Audio Presets and Night Mode)

EQ (EQUALIZER)

Press these EQ buttons on your remote to select your desired settings. The system will remember the last setting.

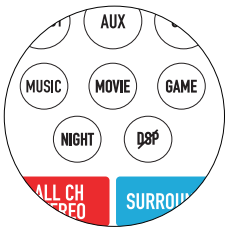

Night Mode / Dynamic Range Compress (DRC)

This function allows you to retain a theater-like environment at low volume levels. Ensures dialog remains audible and clear even when watching a movie late at night with lowered volume output. Available with DTS and DOLBY encoded content on HDMI, HDMI ARC / eARC and Optical inputs.


Button	OSD Display	Description	LED Display
Night	NIGHT Mode OFF (Default)	Volume normalization OFF (default).	NIGHT OFF
	NIGHT Mode 50%	50% of volume normalization.	NIGHT 50%
	NIGHT Mode 100%	100% of volume normalization, recommended for nighttime listening.	NIGHT 100%
	NIGHT Mode AUTO	Automatic contextual volume normalization (DOLBY content only).	NIGHT AUTO



SECTION 5

PERSONALIZE

5.1 BASS and Treble

DRAGON comes with a variety of tonal adjustments that allow you to personalize the listening experience. Tone controls can be adjusted from 1 to 10 steps.

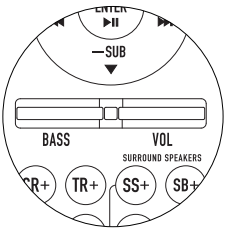

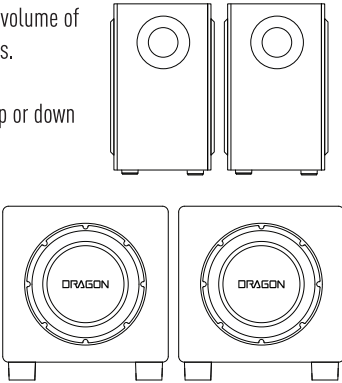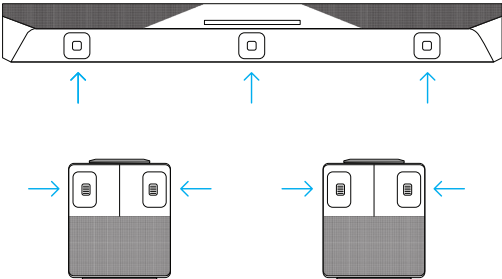Button	OSD Display	Description	LED Display
BASS	Bass ____	<p>Adjusts the overall volume of low-frequency notes.</p> <p>Push the buttons up or down to adjust the level.</p> 	BASS ____
TR +/-	Treble ____	<p>Adjusts the volume of high-frequency notes.</p> 	TREBLE ____


5.2 Channel Configuration

i. For DRAGON with Dual-Opposing 8" Subwoofers x 2




If your system has 3-4 subwoofer cabinets, each will be regarded as one subwoofer channel.



Main Unit

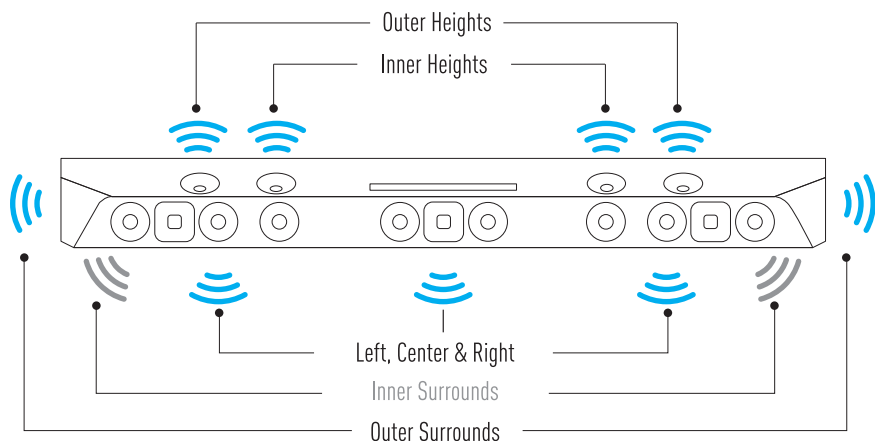

Left Subwoofer

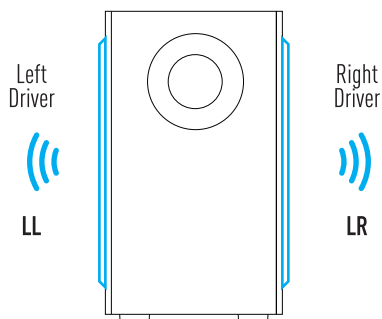

Right Subwoofer

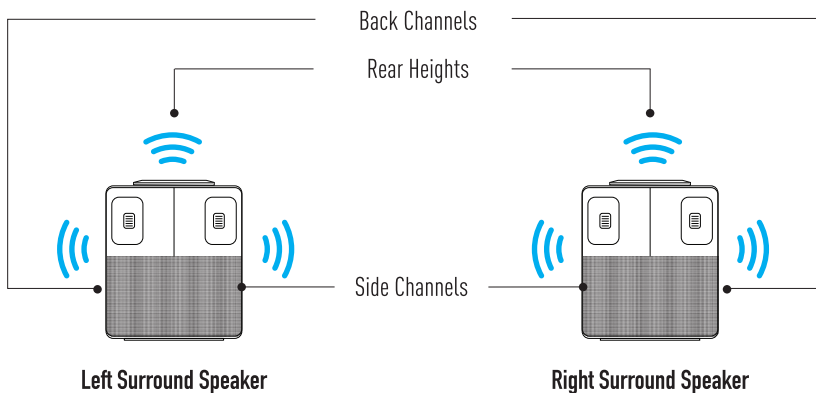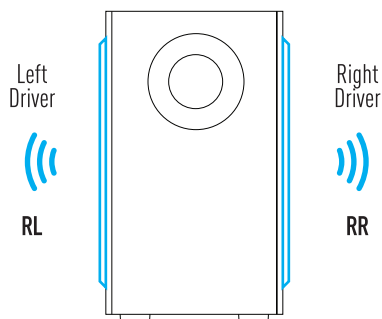


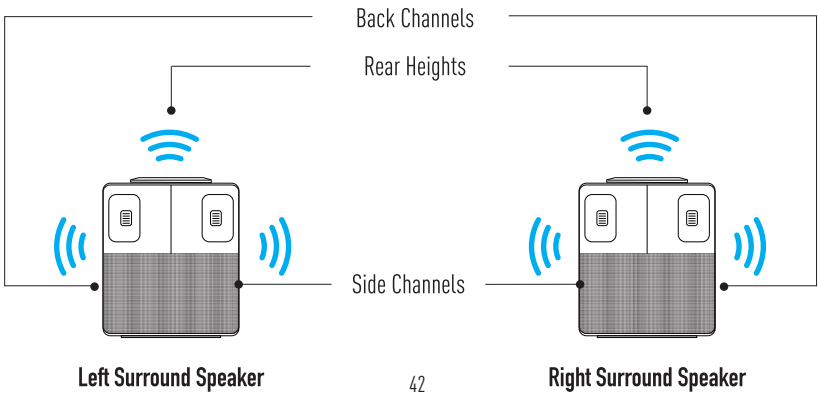
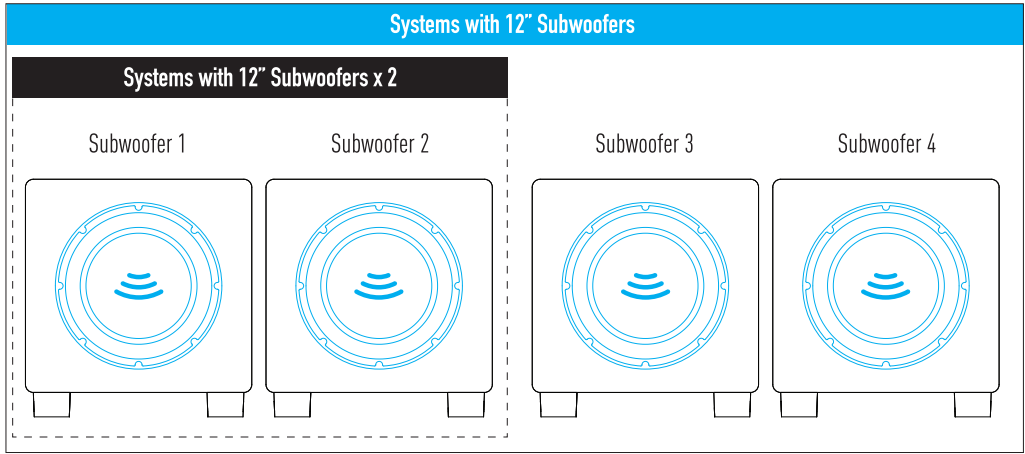
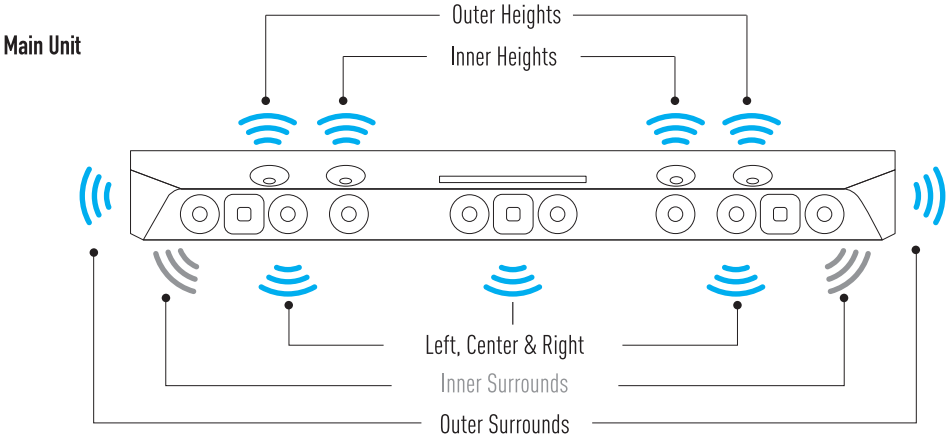
5.2 Channel Configuration

ii. For DRAGON with 12" Subwoofers




For Dual 12",
Quad 12"

 If your system has 3-4 subwoofer cabinets, each will be regarded as one subwoofer channel.



5.3 Subwoofer Adjustments

Enable/Disable the desired number of subwoofers to suit your listening preferences. Press ▲/▼ on the remote when the OSD is not being displayed.

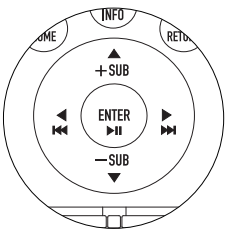

Settings Available

ii. For DRAGON with Dual-Opposing 8" Subwoofers x 2

QUAD SUBS (LL, LR, RL, RR)		TRIPLE SUBS (LL, LR, RR)	
DUAL SUBS (LL, RR)		SINGLE SUB (LL)	
Left Subwoofer	Right Subwoofer	Left Subwoofer	Right Subwoofer

ii. For DRAGON with 12" Subwoofers x 2


DUAL SUBS		SINGLE SUB	
Subwoofer 1	Subwoofer 2	Subwoofer 1	Subwoofer 2



- If you have 3-4 subwoofer cabinets, use this feature to turn off one or more subwoofers.
- If you have a mix of subwoofer types, the dual-opposing 8" subwoofers will be Subwoofer 3 and 4.









5.3 Subwoofer Adjustments









Enable/Disable the desired number of subwoofers to suit your listening preferences.
Press ▲/▼ on the remote when the OSD is not being displayed.

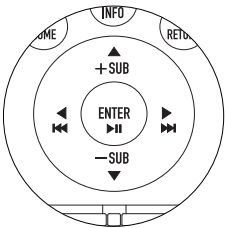

Settings Available

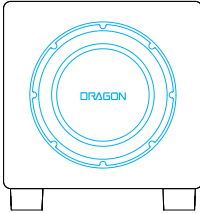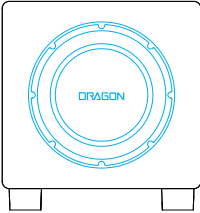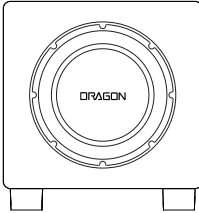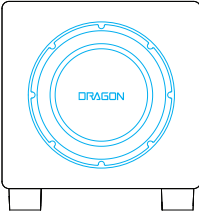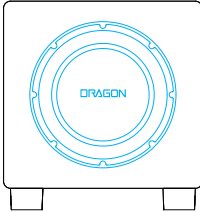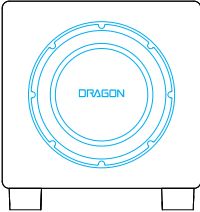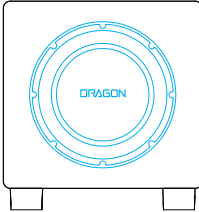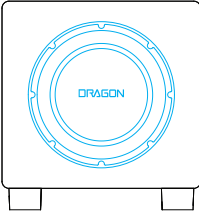


iii. For DRAGON with 12" Subwoofers x 4

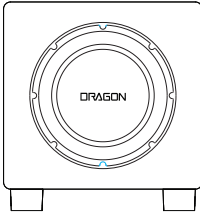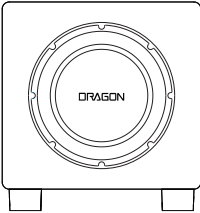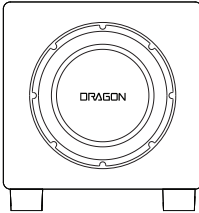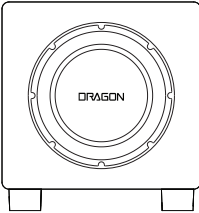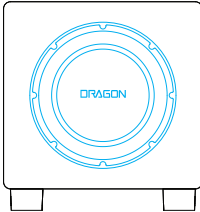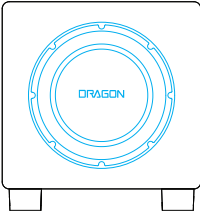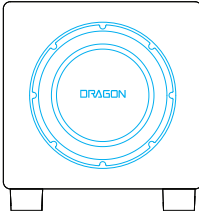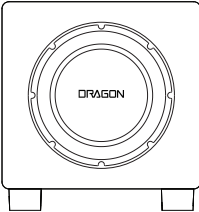QUAD SUBS		TRIPLE SUBS	
 Subwoofer 4	 Subwoofer 3	 Subwoofer 4	 Subwoofer 3
 Subwoofer 1	 Subwoofer 2	 Subwoofer 1	 Subwoofer 2

DUAL SUBS		SINGLE SUB	
 Subwoofer 4	 Subwoofer 3	 Subwoofer 4	 Subwoofer 3
 Subwoofer 1	 Subwoofer 2	 Subwoofer 1	 Subwoofer 2


5.4 Channel Volume Adjustments

Channel Volume controls can be adjusted from 1 to 10 steps.


Button	OSD Display	Description	LED Display
CR +/-	Center ____	Adjusts the volume of the Center channel in the Main unit (delivers most of the dialog for video content). 	CENTER ____
SS +/-	Sur Speakers Side ____	Adjusts the volume of the Side channels in the Surround speakers . 	REAR S ____
SB +/-	Sur Speakers Back ____	Adjusts the volume of the Back channels in the Surround speakers . 	REAR B ____



5.5 Height Channel Volume

DRAGON has a total of 6 up-firing speakers. The main unit features 4 up-firing speakers positioned at 10° and 20° angles (also known as outer and inner heights). The remaining 2 up-firing speakers are in the surround speakers and can be rotated towards the listening area.

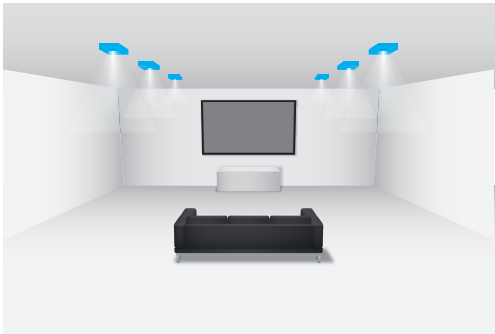

Adjusting the height channel volume

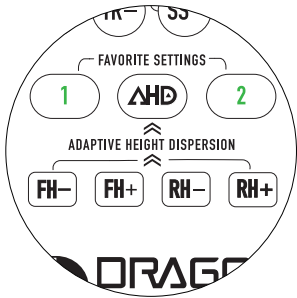


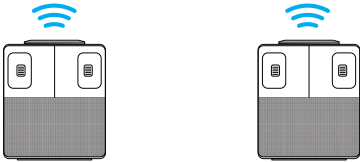Button	OSD Display	Description	LED Display
FH +/-	Main Height: Inner ____ Outer ____	Adjusts the volume of inner and outer height channels 	F HGHT ____
RH +/-	Sur Speakers Height ____	Adjusts the volume of rear height channels 	R HGHT ____

- The volume of inner and outer height speakers in the main unit can be configured independently via the OSD. Simply press "HOME", then navigate to 'Audio Setup' > 'Channel Volume Level Setup'.
- If the inner and outer height channels have different volume levels, the LED display will show the higher volume level.
- Does your room have uneven ceilings? Optimize height channel balance by referring to Section 12.2, pg 89.

5.6 Adaptive Height Dispersion

Get the most immersive height surround performance based on the acoustics of your listening environment with Nakamichi's proprietary Adaptive Height Dispersion (AHD) processing technology.

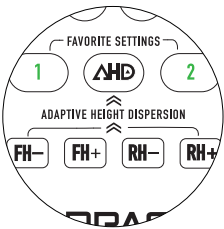

AHD Modes/ OSD Display	Function
AHD OFF	Delivers height performance like the movie director intended.
AHD FOCAL	Optimizes height delivery for a center-focused 3D soundstage. Most height action happens in a narrow field of view.
AHD WIDE	Delivers height effects above and around you, creating an expansive sense of height effects happening in a wider field of view.
AHD MAX (Default)	Maximum height effects, regardless of content type.


Scan the QR Code to visualize how AHD optimizes your content with each mode.

Alternatively, visit bit.ly/dragon-ahd-visualized



5.7 Save Your Favorite Settings

2 sets of audio settings can be saved into DRAGON's memory, allowing quick access to your favorite audio preferences for different content (e.g. movies and music).

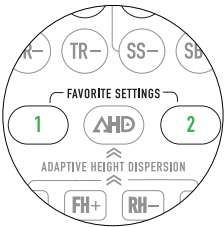

A. Saving Settings to System Memory

1. Personalize your settings.
2. Press and hold the "FAVORITE SETTINGS 1 / 2" button on the remote.
3. The following will be displayed when settings have been successfully saved:

Button	OSD Display/Function	Main Unit Display
1	Favorite 1 Saved	FAV1 SAVED
2	Favorite 2 Saved	FAV2 SAVED



Use the OSD to save audio settings to system memory.
Press "HOME" button on the remote and navigate to "Audio Setup".
Personalize your settings. Once completed, press and hold "FAVORITE SETTINGS 1 / 2".
The main unit display will show "FAV 1 / 2 SAVED".



- The following audio settings can be saved and loaded as your favorite settings:
1. Master Volume
 2. Equalizer
 3. Surround Mode
 4. Bass and Treble
 5. Channel Volume for all channels (including center, surround and height)
 6. AHD Option
 7. Subwoofer drivers that are active
 8. Low-Frequency Effect

B. Loading Favorite Settings

1. Press the "FAVORITE SETTINGS 1 / 2" button once. The corresponding settings will be loaded.
2. The following will be displayed when all settings are loaded.

Button	OSD Display/Function	Main Unit Display
1	Favorite 1 Loaded	FAV1
2	Favorite 2 Loaded	FAV2




If no settings have been saved to either button, a popup OSD will indicate: "Favorite _ not set". The main unit display will show "FAV_ NOT SET".

5.8 Using the INFO Button (eARC/ARC)

In TV ARC/eARC mode, each click of the INFO button unveils below details on the soundbar display:

- 1. Source audio format
- 2. Surround mode
- 3. Equalizer
- 4. AHD mode
- 5. Number of active subwoofers

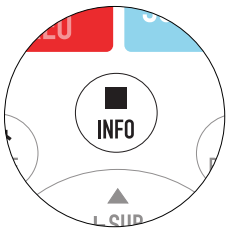

You can exit INFO screen by pressing any key on the remote.


Source Audio Format

LED Display	Content Format / Codec
DOLBY ATMOS TRUEHD	Dolby Atmos encoded in Dolby TrueHD
DOLBY ATMOS DD+	Dolby Atmos encoded in Dolby Digital Plus
DOLBY ATMOS MAT	Dolby Atmos metadata into lossless pulse-code modulation** ** XBOX SERIES X / One X/S and Apple TV 4K come with a Dolby Atmos MAT encoder, which is designed to encode, decode and incorporate Dolby Atmos metadata into lossless pulse-code modulation (LPCM) audio.
DOLBY TRUEHD	Dolby TrueHD content
DOLBY D+	Dolby Digital Plus content
DOLBY DIGITAL	Dolby Digital content
DTS:X MA	DTS:X Master Audio content rendered with DTS:X PRO
DTS:X	DTS:X content rendered with DTS:X PRO
DTS-HD MA	DTS HD Master Audio
DTS-HD	DTS High-Definition Audio
DTS	DTS Digital
LPCM 7.1	Linear Pulse Code Modulation 7.1
LPCM 5.1	Linear Pulse Code Modulation 5.1
PCM 2.0	Pulse-Code Modulation

5.8 Using the INFO Button (HDMI 2, 3 & 4 inputs)

Information displayed via OSD on TV

When using DRAGON's HDMI inputs, on-screen display provides information about audio format, video format, audio processing modes and more. See table below for full details. Adjust the popup INFO screen duration by following the instructions on pg 61, under "Popup duration".

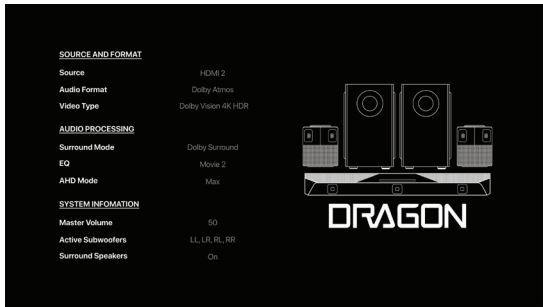

Disclaimer: Diagrams included in the manual are for illustration purposes only. Actual image and text may vary.

Information Displayed	Description
Source	Displays current HDMI input.
Audio	Displays the type of audio content being received by source device.
Video	Displays the video resolution and indicates if HDR content is being received by the source device* (e.g 3840 x 2160 Dolby Vision).
Surround Mode	Displays the currently selected upmixing mode. <i>(Dolby Surround, DTS Neural:X, DTS Direct, Studio, Native, All Channel Stereo, Stereo)</i>
Equalizer	Displays the currently selected Equalizer mode. <i>(Movie 1/2/3, Music 1/2/3, Game, News, Sports, DSP OFF)</i>
AHD Mode	Displays the Adaptive Height Dispersion Mode. <i>(Off, Focal, Wide, Max)</i>
Master Volume	Displays the current system volume. <i>(0 to 100)</i>
Active Subwoofers	Displays the subwoofer drivers/cabinets that are active For DRAGON with Dual-Opposing 8" Subwoofers x 2: <i>(LL, LR, RL, RR)^</i> For DRAGON with 12" Subwoofers x 2: <i>(Subwoofer 1, 2)</i> For DRAGON with 12" Subwoofers x 4: <i>(Subwoofer 1, 2, 3, 4)</i>
Surround Speakers	Shows if surround speakers are turned on or off.



If your system includes a mix of subwoofer types, the 12" subwoofers will always be assigned as Subwoofer 1 and Subwoofer 2 in the OSD.

^ LL and LR refer to the left and right drivers in the left subwoofer.
RL and RR refer to the left and right drivers in the right subwoofer.

SECTION 6


ON-SCREEN DISPLAY

6.1 Using the OSD

The Nakamichi DRAGON is equipped with On-Screen Display (OSD) capabilities. Access advanced settings or view playback information with ease.

A. Accessing the OSD


1. Power on your TV and DRAGON.
2. Press the “🏠 HOME” Button to enable or disable the OSD screen.

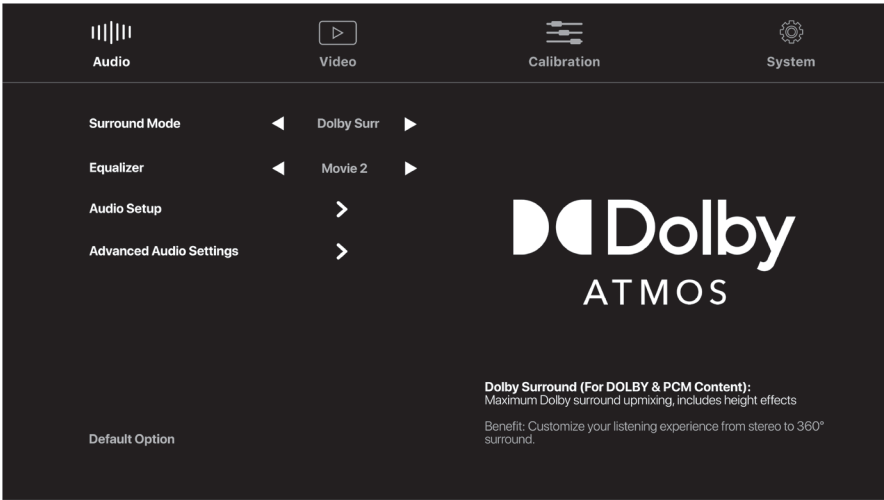

Disclaimer: Diagrams included in the manual are for illustration purposes only. Actual screen text may vary.

B. Navigating the OSD

- Use ▲▼▶◀ on your remote to browse the OSD menu.
- For sub-menus, press “ENTER” to access additional options.
- Press the ↵ RETURN button to quit the current action/exit the sub-menu, and go back to the previous list of settings.
- To exit the OSD press the “🏠 HOME” button.

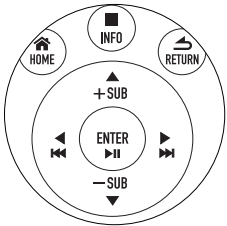

C. Additional Information

- There are 4 setting tabs: **Audio, Video, Calibration and System.**
- Use ▲▼▶◀, “ENTER” and ↵ RETURN buttons on your remote to navigate.
- Helpful information about each setting will be shown on screen when selected.
- **System Default = Orange text**
Benefit = Green text
Instructions = Cyan text
Warning = Red text

6.2 Audio Settings

LED Display	Content Format / Codec
Surround Mode <i>HDMI: Dolby Surround</i> <i>Bluetooth: All Channel Stereo</i>	Select from different channel mapping options. <i>(Options: Dolby Surround, DTS NeuralX, DTS Direct, Studio, Native, All Channel Stereo, Stereo)</i>
Equalizer <i>HDMI: Movie 2</i> <i>Bluetooth: Music 1</i>	Optimize playback for your content with Nakamichi audio presets. <i>(Options: Movie 1/2/3, Music 1/2/3, Game, News, Sports, DSP OFF)</i>
Audio Setup <i>Default settings are highlighted in orange</i>	<ul style="list-style-type: none">• Channel Level Volume Setup: Fine-tune each channel's volume and balance to best fit your room.• Subwoofers Setup: Adjust the number of active subwoofers and output of Low-Frequency Effects*.• Height Effects Setup: Select Adaptive Height Dispersion (AHD) mode, height channel volume and balance. <p>Master volume, bass, treble and equalizer can also be adjusted here.</p>
Advanced Audio Settings <i>Default:</i> <ul style="list-style-type: none">• <i>Night Mode: OFF</i>• <i>Surround Speakers: ON</i>• <i>Lip Sync Adjustment: 0ms</i>• <i>Subwoofer Crossover: 200Hz</i>• <i>DTS:X DIALOG Control: 3</i>	<ul style="list-style-type: none">• Night Mode (Dynamic Range Compression): Decrease the volume difference between loud and quiet passages when turned on. See pg 38. <i>(Options: OFF, 50%, 100%, Auto)</i>• Surround Speakers: Enable/Disable audio playback from the rear speakers.• Lip Sync Adjustments: When TV video appears slower than the audio produced by DRAGON, adjust this until both are in sync. <i>(Options: 0ms - 200ms)</i>• Subwoofer Crossover: Set the highest bass frequency the subwoofer will play. <i>(Options: 120 - 200Hz, in 10 Hz increments)</i>• DTS:X Dialog Control: Increase dialog levels in contrast with background sound and boost vocals separately (for select DTS:X Blu-Ray disc content). If the content does not support it, the option will be grayed out and inaccessible. <i>(Options: Level 1 - 6)</i>

***Low-Frequency Effect (LFE) volume adjustment**

Use the 'Low-Frequency Effect' adjustment to decrease low-frequency effects volume (Default = 0dB). If the bass feels too overpowering, adjust by 1-3 dB. Test with low-frequency content and fine-tune subwoofer and EQ controls to achieve your preferred bass response.

6.3 Video Settings

LED Display	Content Format / Codec
<div>HDMI CEC One Touch Play^</div> <div>Default: On</div>	<div>Enable/Disable HDMI CEC commands between DRAGON and external CEC-enabled source devices (e.g. TV), allowing the device to turn on the TV and switch its HDMI port automatically.</div> <div>(Options: On, Off)</div>
<div>Video Upscaling</div> <div>Default: Auto</div>	<div>Upscale 1080p content up to 4K resolution.</div> <div>(Options: Auto, Off)</div>
<div>Personalized Source Name</div>	<div>Customize the name of each HDMI device connected to DRAGON.</div>

^HDMI CEC ONE TOUCH PLAY: When you start playback on your source device, it will switch the TV and DRAGON to the HDMI input that the device is using. For example, when you play a disc on your Blu-ray player, the TV and DRAGON will switch to the corresponding HDMI input automatically.

*Highlighted text in orange denotes system default.

6.4 Calibration Settings


A. Easy Sound Setup

The Calibration tab provides the option to customize DRAGON's playback to better suit your listening environment. Easy sound setup customizes and delivers instant room calibration for most rooms.


Adjust room size

1. Under easy sound setup, use ◀/▶ to select the option closest to your actual room size.
2. Press ENTER to apply.


Small

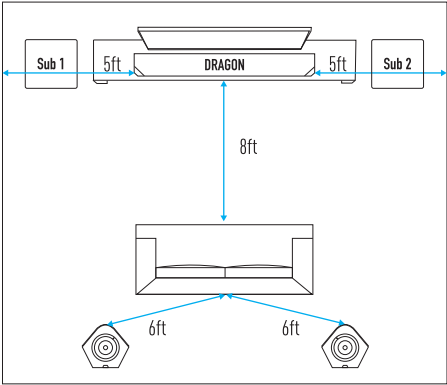

Medium

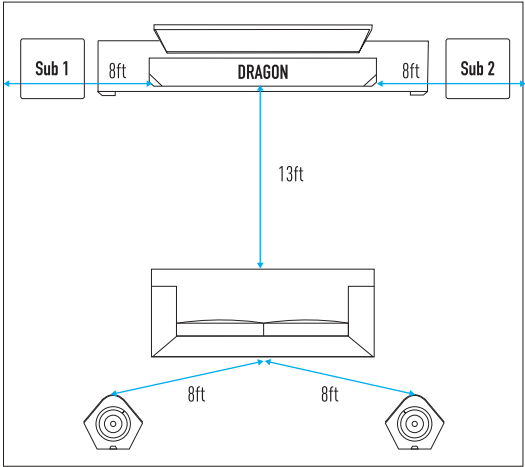

Large

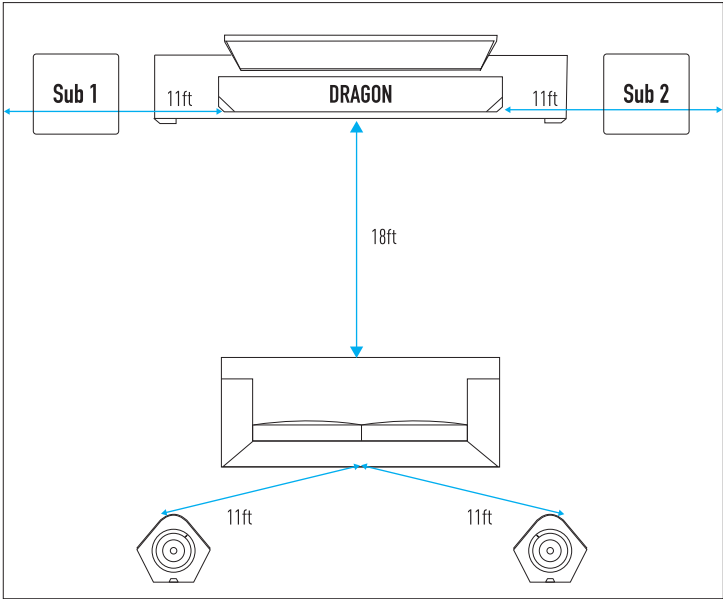

6.4 Calibration Settings

B. Room Size Calibration

Advanced users can access a wide range of calibration options to optimize DRAGON's output to their listening environment.

This sub-category allows you to manually input the distances based on your room environment.

Configure your setup

1. Use ▲▼▶◀ to enter your room size.

Save your setup

1. Scroll down to 'Save Custom Room Size'. Scroll ▶ to select 'Yes'.
2. Press ENTER to save your custom room size configuration.

i. For DRAGON with Dual-Opposing 8" Subwoofers x 2

Speaker Unit	Distance to	Range / Placement
Main Unit	Listening Area	5.0 - 25.0 ft+
	Side Wall (Left / Right)	1.0 - 15.0 ft+
	Ceiling	2.0 - 20.0 ft+
	Surround Speakers	5.0 - 30.0 ft+
Dual-Opposing 8" Subwoofers	Listening Area (Left Subwoofer)	2.0 - 25.0 ft+
	Listening Area (Right Subwoofer)	2.0 - 25.0 ft+
Surround Speakers	Listening Area (Left)	2.0 - 15.0 ft+
	Listening Area (Right)	2.0 - 15.0 ft+

Precision: 0.1ft



- You can also adjust using metric units (meters). Go to the System tab to change measurement units (See Section 6.5C, pg 61).
- You can also restore default room size settings (last option in this sub-menu). When this option is selected, the distances appropriate for a medium room will be applied.

6.4 Calibration Settings

B. Room Size Calibration

ii. For DRAGON with 12" Subwoofers x 2 / More than 3 Subwoofer Cabinets

Speaker Unit	Distance to	Range / Placement
Main Unit	Listening Area	5.0 - 25.0 ft+
	Side Wall (Left / Right)	1.0 - 15.0 ft+
	Ceiling	2.0 - 20.0 ft+
	Surround Speakers	5.0 - 30.0 ft+
Subwoofers	Listening Area (Sub 1)	2.0 - 25.0 ft+
	Listening Area (Sub 2)	2.0 - 25.0 ft+
	Listening Area (Sub 3)*	2.0 - 25.0 ft+
	Listening Area (Sub 4)*	2.0 - 25.0 ft+
Surround Speakers	Listening Area (Left)	2.0 - 15.0 ft+
	Listening Area (Right)	2.0 - 15.0 ft+

*Only adjustable when 3 or 4 subwoofer cabinets are connected.



- You can also adjust using metric units (meters). Go to the System tab to change measurement units (See Section 6.5C, pg 61).
- You can also restore default room size settings (last option in this sub-menu). When this option is selected, the distances appropriate for a medium room will be applied.

6.4 Calibration Settings

C. Volume Level Calibration

Use this function to calibrate the volume balance between speaker channels.


 Protect your hearing. Ensure the volume is at a comfortable level before attempting the calibration process.

Pink Noise Calibration

To aid with the calibration process, DRAGON has 3 pink noise playback options that users can select from:


Test Tone Options	Description
Off	Default
Individual	Plays pink noise only on selected channels
All	Plays pink noise across ALL channels

*The OSD will automatically close when non-navigation keys are pressed.

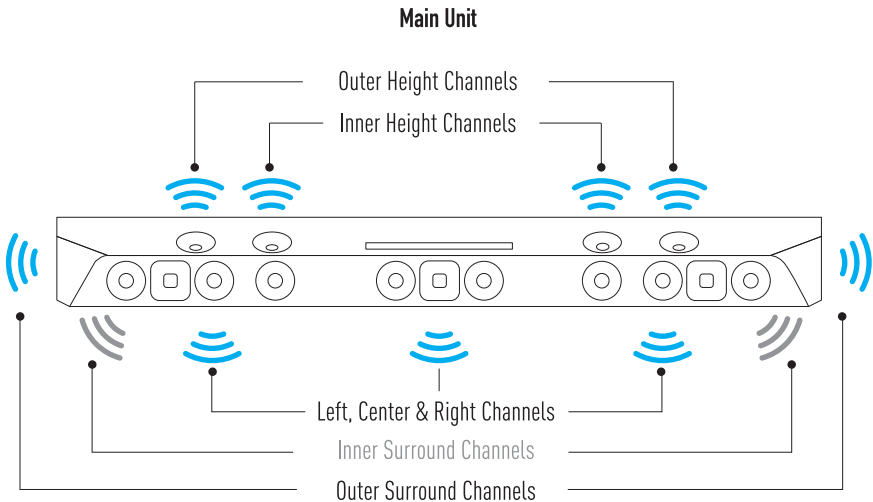


6.4 Calibration Settings


C. Volume Level Calibration

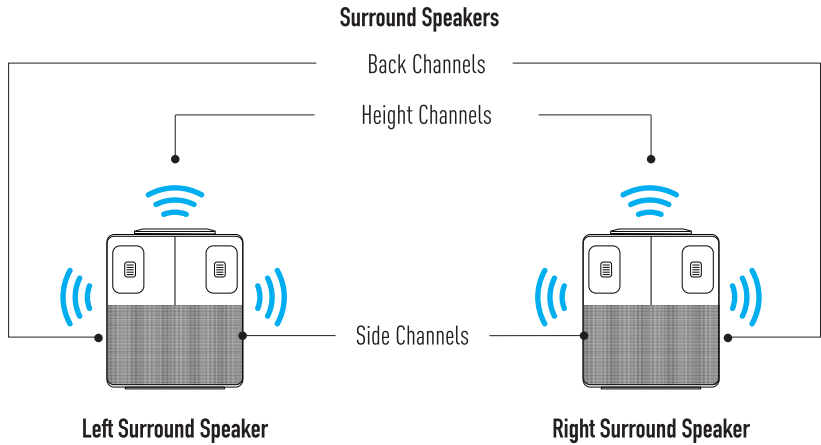

Dual-Opposing 8" Subwoofers
(If Available)

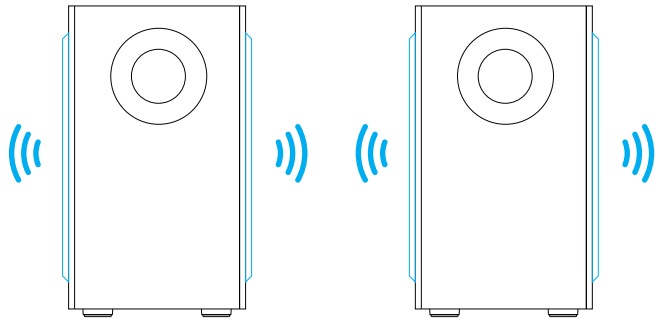

12" Subwoofers
(If Available)

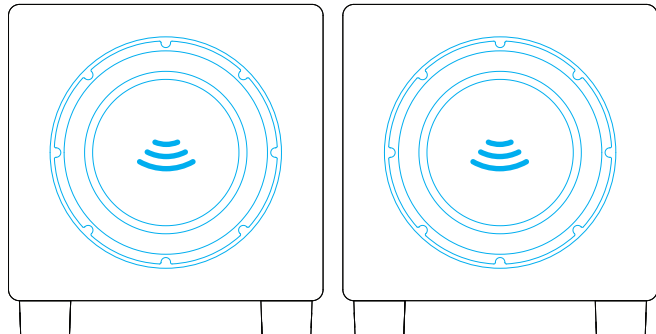

6.5 System Settings

A. Wireless Settings

The System tab provides access to essential general operation settings.


By default, DRAGON utilizes an auto-switching 5GHz wireless frequency to communicate with its wireless subwoofers and surround speakers. In rare instances, nearby wireless networks (e.g. home Wi-Fi) may conflict with DRAGON's wireless transmission, resulting in audio interruptions from the surround speakers and/or subwoofers.

You can change the following settings to optimize DRAGON's wireless capabilities for your home's environment.

 These settings should only be changed if you are facing audio interruptions from DRAGON's wireless surround speakers or subwoofers.

Scan the QR Code or visit bit.ly/dragon-wireless-optimization for recommendations tailored to your home.



Setting	Description
Subs + Surr Wireless Freq (Step 1)	Subwoofer + Surround Speaker Wireless Frequency Default: DRAGON communicates using the 5.8GHz bandwidth Auto 1: DRAGON communicates using the 5.2GHz bandwidth
Wireless Freq Strength (Step 2) Default: 2	Wireless Frequency Strength  Varying degrees of wireless communication strength (1, 2, 3, 3+). Use the setting that enables smooth wireless communication between DRAGON's system components.

B. Subwoofer and Surround Speakers Manual Pairing

The following options are available to check the connection status and facilitate manual pairing of DRAGON's components.

Manual Pairing

Setting	Description
Subwoofer Manual Pairing	If a surround speaker or subwoofer is disconnected, instructions to connect the missing speaker or remote will be shown on OSD screen. See pg 72 for more instructions.
Surrounds Manual Pairing	

6.5 System Settings

C. Miscellaneous Options

Main Unit Display

Setting	Description
Brightness <i>Default: +3</i>	Increase or reduce the brightness of DRAGON's main unit display. <i>(Options: 0, +1, +2, +3: Changes the LED display brightness.)</i> <i>At 0, main unit display auto-turns off after a few seconds. Press any key to wake it up.</i>

Miscellaneous

Setting	Description
Popup Location <i>Default: Bottom Left</i>	Select the location of On-Screen display when adjustments are made. <i>(Options: Bottom left, Bottom center, Bottom right, Top left, Top center, Top right)</i>
Popup Duration	Adjusts the On-Screen Display fade out time. This affects both popup and INFO screen. <i>(Options: 3 - 15 Seconds)</i>

System Operation

Setting	Description
Energy Saving Mode <i>Default: 30 Minutes</i>	Select the period of time before DRAGON goes into standby mode when no signal is detected. <i>(Options: After 30/90/120 Minutes, OFF (Disables energy savings mode))</i>
Firmware Upgrade	The firmware version for DRAGON is displayed. See pg 68 to learn how to upgrade firmware.
Restore Factory Settings	Refresh DRAGON's software and restore factory default settings. Options: <ul style="list-style-type: none">● Fav + Name + Room: Reset all settings without erasing "Favorite Settings", "User Defined Input Names" and "Custom Room Calibration Values"● Yes ALL: Reset All Settings Scroll ► to select "Yes". Press "ENTER" to perform factory reset. System will power off when factory reset is completed.
Units <i>Default: Feet (Imperial)</i>	Select your preferred unit of measurement. <i>Options: Feet (Imperial) or Meters (Metric)</i>





SECTION 7

SURROUND DEMO & CHANNEL TEST TRACKS

7 Surround Demo & Channel Test Tracks


Showcase DRAGON with on-board surround soundtracks.

Playing the Demo:

- 1. Power on the main unit.
- 2. Press  at the top of the main unit.
- 3. To skip a track, press  on your remote, or press  again.
- 4. Press " RETURN" on remote to end Demo at anytime.

The following tracks will be played.

i. For DRAGON with Dual-Opposing 8" Subwoofers x 2

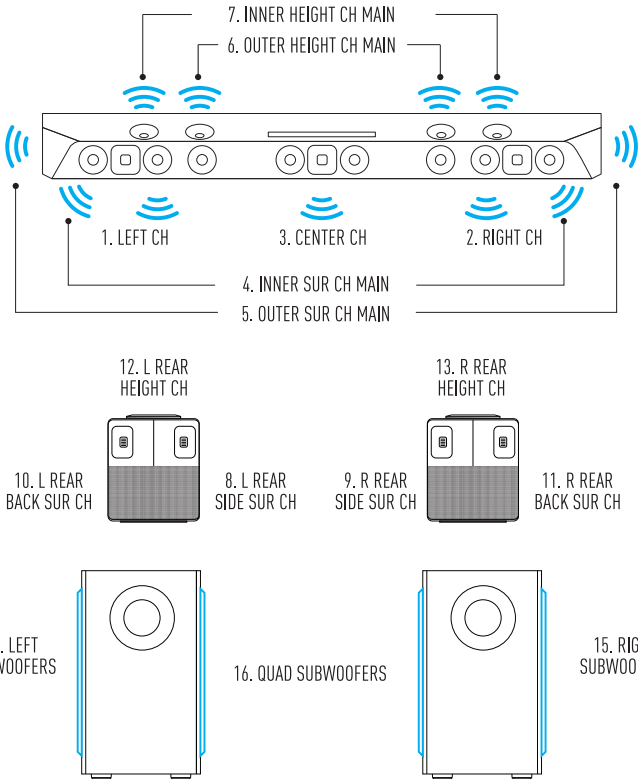Main Unit Display	Description
Demo 1	Plays Dolby Atmos Amaze surround soundtrack.
Demo 2	Plays Dolby Atmos 747 surround soundtrack.
Name of Channel being played: Starting from LEFT CH	<p>Plays channel test tones across each channel, using the following sequence:</p> 

7 Surround Demo & Channel Test Tracks

i. For DRAGON with 12" Subwoofers x 2 / 3 Subwoofer Cabinets or more

Main Unit Display	Description
Demo 1	Plays Dolby Atmos Amaze surround soundtrack.
Demo 2	Plays Dolby Atmos 747 surround soundtrack.
Name of Channel being played: Starting from LEFT CH	<p>Plays channel test tones across each channel, using the following sequence:</p> <p>The diagram illustrates a 7.1.4 surround sound system layout. At the top is a horizontal bar representing the main unit with various speaker drivers. Below it, speakers are arranged in a 3D field. Blue concentric arcs represent sound waves emanating from each speaker. The sequence of channels played is indicated by numbers 1 through 14. The sequence starts with the Left Channel (1), followed by the Center Channel (3), and the Right Channel (2). Then, it moves to the Surround channels: Inner Surround Main (4), Outer Surround Main (5), L Rear Height (12), L Rear Back Surround (10), L Rear Side Surround (8), R Rear Side Surround (9), R Rear Height (13), and R Rear Back Surround (11). Finally, it plays all subwoofers (14). The subwoofers are shown at the bottom as two large circular speakers on stands.</p> <p>7. INNER HEIGHT CH MAIN 6. OUTER HEIGHT CH MAIN 1. LEFT CH 3. CENTER CH 2. RIGHT CH 4. INNER SUR CH MAIN 5. OUTER SUR CH MAIN 12. L REAR HEIGHT CH 13. R REAR HEIGHT CH 10. L REAR BACK SUR CH 8. L REAR SIDE SUR CH 9. R REAR SIDE SUR CH 11. R REAR BACK SUR CH 14. ALL SUBWOOFERS</p>



DRAGON will also follow this sequence when 3 or more subwoofer cabinets are paired to your system.

SECTION 8

MOBILE APPLICATION

8.1 Installation

You can use your smartphone as a remote control to control DRAGON.

Scan the QR Code below to download the mobile application:



Open the mobile application. Follow the instructions to connect your smartphone to DRAGON.

8.2 Functions

The mobile app comes with the following functions:

- Turn your phone into a virtual remote control for DRAGON. All remote functionalities can be accessed via the mobile app.
- Register your warranty.
- Access to Quick Start Guide and User Manual.
- Access to DRAGON Concierge.



Registering DRAGON's warranty takes only a few minutes. **Register yours through the mobile app today!**

SECTION 9

FIRMWARE UPGRADE

9.1 Check the Firmware Version

Periodically, firmware upgrades are released to offer additional features and enhance performance. For more information, visit bit.ly/dragon-firmware.

1. Press the “🏠 HOME” Button to display OSD on TV.
2. Navigate to the System Tab using the arrow keys.
3. Scroll down until you see the ‘Firmware Upgrade’ option. The current firmware version will be displayed.



Use only official Nakamichi firmware files designed for your surround system to prevent voiding the warranty or damaging your system.

Ensure surround speakers, subwoofers and Bluetooth remote control are connected before running a firmware upgrade.

9.2 Perform a Firmware Upgrade

Prepare a USB Drive

- A. Prepare a USB 3.0 drive with a capacity under 128GB.
- B. Plug the USB drive into your PC / Mac.
- C. Reformat the USB drive to **exFAT** format. Proper drive formatting is essential for DRAGON to recognize the firmware file.

Video
Instructions
for:



PC



MAC

Download Official Nakamichi Firmware

- A. Visit support.nakamichi-usa.com/dragon/firmware-upgrade to download the ZIP file containing the latest firmware.
- B. Unzip the ZIP file. Copy the firmware file (aDRAGON.upd) directly into your USB drive. No folder creation required.



DO NOT CHANGE THE NAME OF THE FILE!

Upgrade DRAGON



DO NOT INTERRUPT THE FIRMWARE UPGRADE PROCESS by turning off, restarting any of DRAGON's speakers or pressing remote control buttons; even if the LED display shows no progress. Doing so could result in a damaged unit not covered by warranty. The upgrading process can take up to 30 minutes.

- A. Power on DRAGON. Using the remote, press USB to switch to USB mode.
- B. Plug in the USB drive.
- C. The main unit's LED display will show a prompt.

FW UPGRADE.
PRESS ENTER TO CONTINUE.



Caution: Ensure that the DRAGON main unit, subwoofers and surrounds are all powered on. During this time, you may observe the pairing lights on DRAGON's components flashing. DO NOT TURN OFF any DRAGON component during the firmware upgrade process.

UPGRADING
1-100%

- D. Press ENTER to begin the upgrade. After the firmware upgrade has finished, the main unit will reboot automatically.



- If the firmware upgrade prompt does not appear, press “🏠 HOME” to open the OSD. Navigate to System > ‘Firmware Upgrade’. Press ▶ to select ‘Upgrade’. Then, press ENTER to start the upgrade.
- If your DRAGON system firmware version is the same as or newer than the file on the USB drive, the LED display will show “FIRMWARE UP TO DATE” and the upgrade will not proceed.

9.2 Perform a Firmware Upgrade

Perform a Factory Reset

After completing the firmware upgrade, perform a factory reset.

Method 1: Restore settings while retaining Favorite 1 / 2 custom presets, input names and calibration values:

1. Switch TV to HDMI eARC port.
2. Switch DRAGON to HDMI 2/3/4.
3. Press HOME on your DRAGON remote to activate the OSD.
4. Press ► to navigate to the System tab.
5. Press ▼ to select 'Restore Factory Settings'.
6. Press ► to select 'Fav+Name+Room'.
7. Press ENTER to initiate factory reset.
8. Wait for a few seconds. Press POWER to power on DRAGON. Firmware upgrade complete!

Method 2: Full factory reset (Recommended for major firmware upgrades):



All custom presets, input names and calibration values will be reset. Take a photo of your settings before performing this step.

1. While DRAGON is on, tap and hold the POWER button on the main unit until "FACTORY RESET" appears. The system will power off.
2. Wait for a few seconds. Press POWER to turn DRAGON on.
3. In the OSD, navigate to the Calibration tab and re-enter your room measurements and desired volume level for each channel. Refer to the previously taken photo of your room size settings.
4. Firmware upgrade complete!

SECTION 10


RECONNECTING COMPONENTS





10.1 Check Wireless Components Connection Status

Method 1: Check LED Lights on the Subwoofers/Surround Speakers

The subwoofer has a LED light on its back panel. The surround speaker has a LED light at the top of the speaker. These LED lights indicate the connection status of the wireless components.



LED Indicator	Status
Solid blue	Connected to DRAGON
Blinking Blue Light	Subwoofer/Surround speaker is turned on, looking for main unit to pair with
Off	Subwoofer/Surround speaker is on standby mode
Rapidly Blinking Blue Light	Subwoofer/Surround speaker in pairing mode, searching for main unit to connect to

 The LED indicators on the 12" subwoofer(s) also show its assigned number:

Subwoofer #1	Subwoofer #2
	
	

Method 2: Via the OSD


- Press **HOME** button to open OSD menu.
- Navigate to the System tab > 'Subwoofers/Surrounds Manual Pairing'. Press **ENTER**.
- The state of connection for each component will be indicated.

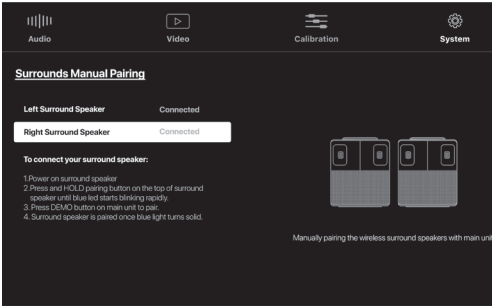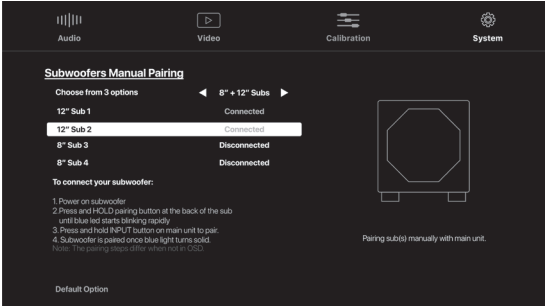


Disclaimer: Diagrams included in the manual are for illustration purposes only. Actual image and text may vary.

10.2 Re-Pairing / Pairing Modular Expansion Subwoofers

1. Connect the subwoofers to power. Toggle the switch to "ON".

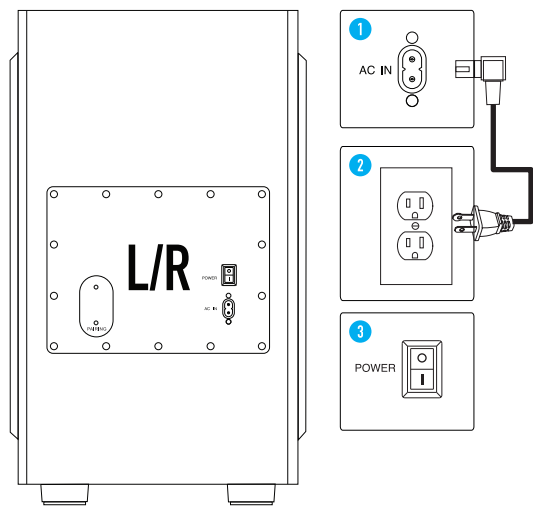


Dual-Opposing 8" Subwoofer

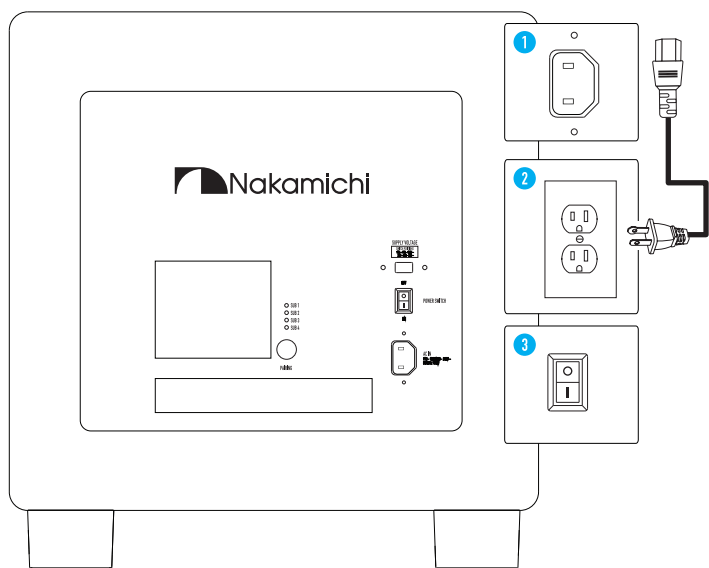

12" Subwoofer

10.2 Re-Pairing / Pairing Modular Expansion Subwoofers

2. Press and hold the pairing button behind the subwoofers until the blue LED blinks rapidly.

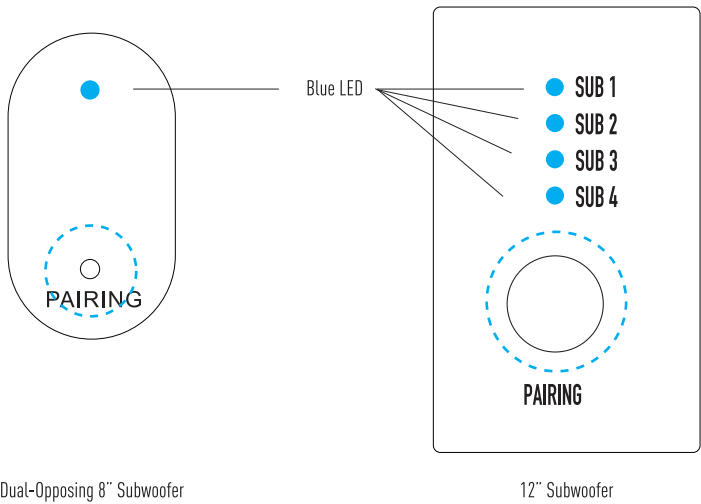

 The subwoofers will stay in pairing mode for 120 seconds. Complete the remaining steps within this timeframe.

3. Press and hold  on top of the main unit for 8 seconds while system is on.




The main unit will display **WIRELESS PAIR**, followed by **SELECT PAIRING OPTION**.

4. LED will display these options:

- > **8 + 12 SUBS**: For a system with a mix of cabinet types.
- > **ALL 12 SUB**: For a system with 12" subwoofers only.
- > **ALL 8 SUB**: For a system with dual-opposing 8" subwoofers only.
- > **SURR SPKR**: For re-pairing surround speakers only.

Press  on your remote to select your desired pairing option. Then, press ENTER.

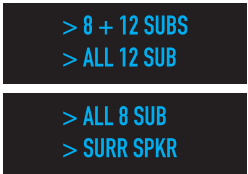

Press  on your remote to select your subwoofer configuration. Then, press ENTER.

10.2 Re-Pairing / Pairing Modular Expansion Subwoofers

5. The main unit will search for a subwoofer to connect to. Once the subwoofer is successfully paired, the display will show:

PAIRED
LS RS LW RW

2 x Dual-Opposing
8" Subwoofers Connected

PAIRED
LS RS W12


2 x 12" Subwoofers Connected

PAIRED
LS RS W123

3 Subwoofers Connected
(Any type)

PAIRED
LS RS W1234

4 Subwoofers Connected
(Any type)



- LS and RS represents Left and Right Surround Speakers.
- LW and RW represent the Left and Right Dual-Opposing 8" subWoofer.
- W12 represents the 2 connected 12" subWoofer.


If a subwoofer was not paired successfully, the affected speaker will be represented with a " - " sign, or the total number of subwoofers shown may not match.

In the example below, one subwoofer was not paired. Retry steps 2-5.

PAIRED
LS RS LW -

PAIRED
LS RS W1

6. To pair additional subwoofers, repeat the steps above. Up to 4 subwoofer cabinets can be paired.



If the above steps do not result in successful pairing,

- Temporarily relocate the subwoofer that fails to pair closer to the main unit. Retry steps 2-5.
- Adjust the wireless frequency and/or increase wireless strength, then retry steps 2-5. See pg 60.

Prefer to use the OSD?

Under the System Tab, select 'Subwoofers Manual Pairing'. Use ◀▶ to select your desired subwoofer configuration. Then, follow on-screen instructions to pair your 12" subwoofer.

(Options: 8" + 12" Subs, 12" Subs Only, 8" Subs Only)

Audio Video Calibration System

Subwoofers Manual Pairing

Choose from 3 options ◀ 8" + 12" Subs ▶

12" Sub 1 Connected

12" Sub 2 Connected

8" Sub 3 Connected

12" Sub 4 Connected



System includes 8" + 12" subs.
Benefits: Greater bass output based on sub configuration.
IMPORTANT: Please select your configuration before proceeding.

Default Option

Audio Video Calibration System

Subwoofers Manual Pairing

Choose from 3 options ◀ 12" Subs Only ▶

Sub 1 Disconnected

Sub 2 Disconnected

Sub 3 Disconnected

Sub 4 Disconnected




System includes 12" subs only.
Benefits: Greater bass output based on sub configuration.
IMPORTANT: Please select your configuration before proceeding.

Default Option

Disclaimer: Diagrams included in the manual are for illustration purposes only. Actual image and text may vary.


10.3 Re-pairing Surround Speakers

1. Connect the surround speakers to power.

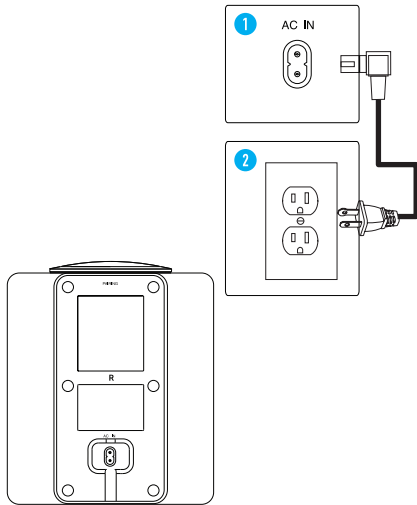

Bottom of the Left and Right surround speaker.

2. Press and hold the pairing button on the top of the surround speaker until the blue LED blinks rapidly.

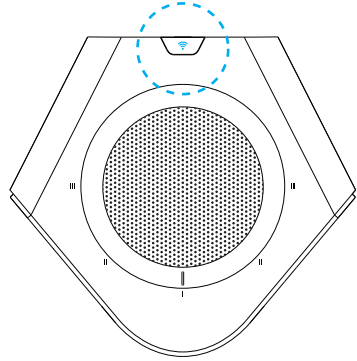

The surround speakers will stay in pairing mode for 120 seconds. Complete the remaining steps within this timeframe.

3. Press and hold **⏻** on top of the main unit for 8 seconds while system is on.



The main unit will display **WIRELESS PAIR**, followed by **SELECT PAIRING OPTION**.

4. LED will display these options:

- > **8 + 12 SUBS**: For a system with a mix of cabinet types.
- > **ALL 12 SUB**: For a system with 12" subwoofers only.
- > **ALL 8 SUB**: For a system with dual-opposing 8" subwoofers only.
- > **SURR SPKR**: For re-pairing surround speakers only.

Press **▲▼** on your remote to select your desired pairing option. Then, press **ENTER**.

> **8 + 12 SUBS**
> **ALL 12 SUB**

> **ALL 8 SUB**
> **SURR SPKR**

Press **▼** on your remote to select "**SURR SPKR**". Press **ENTER**.

10.3 Re-pairing Surround Speakers


5. Once the surround speakers are successfully paired with the main unit, the display will show:

PAIRED

LS RS LW RW

PAIRED

LS RS W12



- LS and RS represent Left and Right Surround Speakers.
- LW and RW represent the Left and Right Dual-Opposing 8" subWoofers.
- W12 represents the 2 connected 12" subWoofers.

6. If a surround speaker is not paired successfully, the affected speaker will be represented with a " - " sign.


In the example below, one surround speaker was not paired, Retry steps 2-5.

PAIRED

- RS LW RW

PAIRED

- RS W12



If the above steps do not result in successful pairing,

- Temporarily relocate the surround speaker that fails to pair closer to the main unit. Retry steps 2-5.
- Adjust the wireless frequency and/or increase wireless strength, then retry steps 2-5. See pg 60.

10.4 Re-Pairing Bluetooth Remote Control

DRAGON remote that is on infrared transmission can be used immediately without going through the pairing process. You will only need to perform the pairing instructions below when the remote is on Bluetooth transmission.

Watch a video walkthrough here:
bit.ly/dragon-remote-pairing



Unpair Bluetooth Remote

1. Power on DRAGON via the main unit's touch panel.
2. Press and hold  on the main unit for 8 seconds.
3. DRAGON will disconnect and forget its Bluetooth connection with the current remote. The main unit display will show the following:



Pair Bluetooth remote control:

1. After disconnecting from the previous remote, DRAGON will search for a new Bluetooth remote.





2. Remove the batteries from the remote. Press remote keys to discharge residual power.
3. Reinsert the batteries into the remote. Then, press and hold the "🏠 HOME" and "↶" buttons simultaneously for 5 seconds.

The backlit keys on the remote will begin to flash, indicating that it has entered pairing mode.

4. Wait for DRAGON to search and pair with the remote. Upon successful connection, DRAGON will display the following:



 If DRAGON shows "**BT REMOTE NOT FOUND/UNABLE TO PAIR**", press and hold  for 8 seconds to reactivate the Bluetooth remote pairing function on the main unit. Then, follow the steps again to pair your Bluetooth remote control.

If you have issues with Bluetooth remote connectivity, as a temporary solution, switch to Infrared Mode by toggling a switch hidden by the battery cover (pg 14). Then, contact DRAGON Concierge for a solution.

SECTION 11

PRODUCT INFORMATION

11.1 Specifications

Speaker Driver and Power Specifications	
Main Unit	58" chassis with dedicated chambers for each channel, containing: 10 x 3" Drivers 4 x 3" Dual-Angled Up-firing Speakers 3 x 1.5" Air Motion Tweeters Peak Power: 1500W
Wireless Subwoofers	For Dual-Opposing 8" Subwoofers: Peak Power: 500W per subwoofer cabinet For 12" Subwoofer: Peak Power: 750W per subwoofer cabinet
Wireless Omni-Motion Reference Surrounds (2 Modules)	2 x 1.5" Air Motion Tweeters each 2 x 3.5" Drivers each 1 x 3" Rotatable Up-firing Driver each Peak Power: 250W per surround speaker module
Total Channels	Up to 11.4.6
Total Peak Power	DRAGON with Dual-Opposing 8" Subwoofers x 2: 3000W DRAGON with 12" Subwoofers x 2: 3500W DRAGON with 12" Subwoofers x 4: 5000W
Total Loudness	DRAGON with Dual-Opposing 8" Subwoofers x 2: 125dB DRAGON with 12" Subwoofers x 2: 127dB DRAGON with 12" Subwoofers x 4: 131dB
Overall Frequency Response	DRAGON with Dual-Opposing 8" Subwoofers only: 20Hz-40Khz DRAGON with any configuration that includes 12" subwoofer(s): 19Hz-40Khz

Inputs and Outputs	
HDMI Connectivity	3 x HDMI 2.1 Inputs 1 x HDMI Out (eARC to TV) (HDCP 2.3) Up to 4K120Hz/8K60Hz with VRR/ALLM/FRL, Dolby Vision passthrough support with video upscaling functionality
Other Inputs	1 x Optical Input 1 x Aux Audio Input Bluetooth 5.0 with aptX™ HD 1 x USB (For Firmware Upgrade Only)
Audio Outputs (Stereo Only)	1 x Optical Output 1 x Aux Audio Output

11.1 Specifications

Core Features	
Codecs and Formats Supported	Dolby Atmos Supported Codecs: Dolby TrueHD, Dolby MAT, Dolby Digital Plus, Dolby Digital
	DTS:X PRO Certified Codecs: DTS-HD Master Audio, DTS-HD High Resolution Audio, DTS Digital Surround
	LPCM 7.1, LPCM 5.1, PCM
Audio Enhancements	10 EQ Modes: Movie 1/2/3, Music 1/2/3, Game, News, Sports, No EQ
	Night Mode
	Adaptive Height Dispersion (AHD) Technology
	Channel Volume Control, Subwoofer and Height Effects setup
	Channel Level and Room Size Calibration
	Surround Modes: Dolby Surround, DTS Neural:X, DTS Direct, Studio, Native, All Channel Stereo, Stereo Only

Miscellaneous	
Display Functionality	On-Screen Display Dot-Matrix LED display (on main unit)
Remote Control	45-Key - backlit LED with brushed aluminum finish Bluetooth and IR Compatible Smartphone remote application supported
Power Input	110 - 240V, 50 / 60Hz

Dimensions and Weight	Dimensions	Weight
Main Unit	58.1 x 7.7 x 4.4 inch	32.2lbs each
Subwoofer	Dual-Opposing 8" Subwoofers: 12.5 x 11.2 x 20.9 inch 12" Subwoofers: 20.1 x 16.9 x 18.1 inch	Dual-Opposing 8" Subwoofers: 34.4lbs each 12" Subwoofers: 80lbs each
Surround Speakers	9.0 x 8.3 x 10.7 inch	8.8lbs each

11.1 Specifications

DRAGON is compatible with the following audio codecs and formats:

HDMI Inputs/ARC/eARC

Audio Signal Types	Audio Signal Formats	Compatible Inputs
2 Ch Linear PCM	2 Ch, 32-192kHz, 16/24-bit	TV HDMI ARC/eARC, HDMI Inputs
Multi-Ch Linear PCM	7.1 Ch, 32-192kHz, 16/24-bit	TV HDMI ARC/eARC, HDMI Inputs
Bitstream (SD) - 5.1ch	Dolby Digital, DTS, AAC	TV HDMI ARC/eARC, HDMI Inputs
Bitstream (HD Audio)	Dolby Digital Plus, Dolby Atmos Digital Plus	TV HDMI ARC/eARC, HDMI Inputs
Bitstream (HD Audio)	Dolby TrueHD, Dolby Atmos TrueHD, Dolby Atmos MAT, DTS-HD High Resolution Audio, DTS-HD Master Audio, DTS:X	TV HDMI eARC, HDMI Inputs

Digital Audio Signal (Optical)

Recommended for: CD / DVD playback and devices without HDMI output.

Audio Signal Types	Audio Signal Formats
2 Ch Linear PCM	2 Ch, 32-192kHz, 16/24-bit
Bitstream (5.1ch)	Dolby Digital, DTS, AAC

Aux In: 2 Ch Linear PCM, 32 – 192kHz, 16/24-bit

- Refer to documentation supplied with the playback device, and set the device appropriately.
- To decode audio bitstream signals on this unit, set the input source device appropriately so that the device outputs bitstream audio signals. Refer to documentation supplied with the device for details.

11.2 Glossary

This section explains the technical terms used in this user manual.

Adaptive Height Dispersion (AHD)

Nakamichi's exclusive height processing technology that unlocks the maximum potential of height effects for different content types and listening preferences.

Dolby Atmos Object-Based Audio

Dolby Atmos is an object-based audio format with the capability to reproduce up to 128 simultaneous objects. Every sound in a scene can be represented as a separate audio object that can be positioned and moved throughout the 3D space. For more information, visit <https://www.dolby.com/us/en/brands/dolby-atmos.html>

Dolby Digital

Dolby Digital is a compressed digital audio format developed by Dolby Laboratories, Inc. that supports 5.1-channel audio. This technology is used for audio on most DVD discs.

Dolby Digital Plus

Dolby Digital Plus, also known as Enhanced AC-3 is a digital audio compression scheme developed by Dolby Labs for transport and storage of multi-channel digital audio. This format is commonly found on many streaming services, including Netflix, Amazon Prime, Disney+, HBO Max and many more.

Dolby MAT

Dolby MAT is used by live TV broadcasts, certain streaming devices and game consoles for on-the-fly encoding, and can include Dolby Atmos Metadata.

Dolby Surround

Dolby Surround expands on stereo to deliver sound from the sides, behind, and even above you, creating a natural, multidimensional sonic environment based on the science of how humans hear. Dolby audio in your home theater improves the power, clarity, and realism of sound by upmixing content into 11.x.6 channels.

Dolby TrueHD

Dolby TrueHD is a lossless multi-channel audio codec developed by Dolby Laboratories which is used in home-entertainment equipment such as Blu-ray disc players and home theater systems. It competes with DTS-HD Master Audio, a lossless codec from DTS.

Dolby Vision

Dolby Vision transforms your TV experience with dramatic imaging with incredible brightness, contrast, color, details and dimensionality. And with the advanced capabilities in Dolby Vision, you'll see there's more to the story that generic HDR cannot reveal.

DTS Digital Surround

DTS Digital Surround is a compressed digital audio format developed by DTS that supports 5.1-channel audio. This technology is used for audio on most DVD discs.

DTS-HD High Resolution Audio

DTS-HD High Resolution Audio is a compressed digital audio format that supports 7.1-channel and up to 96kHz / 24-bit audio. It remains fully compatible with the existing DTS multichannel audio systems.

DTS-HD Master Audio

DTS-HD Master Audio is an advanced lossless audio format developed to offer a high-definition home theater experience by DTS, Inc. It is commonly found on Blu-ray discs and it can carry up to eight channels of 96kHz / 24-bit audio (up to six channels of 192kHz / 24-bit audio) simultaneously.

DTS NEURAL:X

DTS Neural:X* is the latest down-mixing / up-mixing and spatial remapping technology from DTS. It is built in to DTS:X PRO to provide upmix of Neural:X-encoded data. DTS Neural:X will upmix DTS content into 11.x.6 channels to match the capabilities of DRAGON.

*Note: When Neural:X is selected, channel based DTS content with a sampling rate above 48kHz will be processed natively without further upmixing. This is an inherent limitation of the upmixing technology.

DTS:X Dialog Control

DTS:X Dialog Control allows you to boost the volume of dialog, increasing its intelligibility. People with impaired hearing may also benefit. Note: Content creators may disable the use of this feature on their content, so this feature may not always be available.

DTS:X Master Audio

DTS:X Master Audio offers 24-bit lossless and discrete immersive audio for Blu-ray, Ultra HD Blu-ray and other digital formats. It supports both high-channel count and multi-dimensional object-based audio coding, while maintaining full backward compatibility with legacy DTS-HD and DTS Digital Surround devices, all within a single bitstream.

DTS:X Object-Based Audio

DTS:X uses a technology called object-based audio that processes each sound contained in an audio source as an "object" and memorizes each object's sound changes and positional changes in a sound field to control these changes during playback. For more information, visit <https://dts.com/dtsx>

DTS:X PRO

DTS:X PRO is a premium home cinema technology that is an evolution of DTS:X, rendering object-based audio information for up to 32 connected speakers, enabling greater spatial resolution and realism. It is a substantial upgrade compared to the standard home theater DTS:X renderer that natively supports rendering of up to 12 speakers.

Dynamic Range Compression (DRC)

DRC is an audio signal processing operation that reduces the volume of loud sounds, while amplifying quiet sounds. This reduces (or compresses) an audio signal's dynamic range. DRC is also known as volume normalization.

Energy Saving Mode

Automatically switches off the system after a period of inactivity to promote eco-friendliness.

11.2 Glossary

HDMI

HDMI (High-Definition Multimedia Interface) is the world-wide standard interface for digital audio/video signal transmission. This interface transmits both digital audio and digital video signals using a single cable without any loss. HDMI complies with HDCP (High-bandwidth Digital Content Protection) and provides a secure audio/video interface. For further information on HDMI, visit the HDMI website at <http://www.hdmi.org/>.

HDMI ARC / eARC

HDMI Audio Return Channel (ARC) / enhanced Audio Return Channel (eARC) offers two-way communication between DRAGON and TV over a single HDMI connection. Essentially, the HDMI ARC port lets you use HDMI as both an input and an audio output.

HDMI-CEC CONTROL

HDMI-CEC Control allows you to operate external devices via HDMI. If you connect a TV that supports HDMI CEC to DRAGON, you can control DRAGON with your TV's remote control. Functions supported include:

- Standby synchronization.
- Volume control, including mute.

HDMI Passthrough

HDMI Passthrough allows DRAGON to send video/audio content from a selected HDMI input on the main unit to the TV, even during standby.

HDCP

HDCP (High-bandwidth Digital Content Protection) is a digital copy protection form that prevents copying of digital contents as it travels across connections (such as HDMI).

Lip Sync

Video output sometimes lags behind audio output due to the complexity of signal processing caused by an increase in video signal capacity and internet streaming delay. Lip Sync is a technique to compensate the timing lag between audio and video output.

LPCM

Linear Pulse-Code Modulation is a method of digitally encoding uncompressed (lossless) audio information, generally used for transmitting uncompressed 5.1 or 7.1 channel audio.

On Screen Display (OSD)

An OSD allows you to control the surround system with ease, displaying all settings on a user-friendly interface. DRAGON's OSD includes helpful visuals to aid with each adjustment option.

Passive Radiator

Converts the air pressure changes caused by a subwoofer driver in the same enclosure into additional low-frequency output, just like a subwoofer port.

PCM (Pulse-Code Modulation)

Pulse-Code Modulation is a digital representation of uncompressed (lossless) analog audio signals.

PerfectHeight Mechanism

An innovation developed by Nakamichi that allows for the up-firing drivers on the Omni-Motion Reference Surrounds to be rotated up to 180 degrees to accommodate any environment and seating position.

Qualcomm aptX™ HD

Qualcomm® aptX™ HD was designed to answer the growing demand for high resolution audio. This enhanced codec supports 24-bit music quality over Bluetooth. This allows listeners to hear even the smallest details in their music.

Room Calibration

Room Calibration optimizes the level and timing of different sonic frequency ranges to your room placement. Easy sound setup is recommended for basic users. Advanced room calibration is also available for prosumers.

Smart Home

Smart Home systems allow homeowners to control their appliances and home theater systems remotely using an internet-connected hub, either through a smartphone, tablet or voice commands.

Subwoofer Crossover Frequency

Adjusting the subwoofer crossover directs bass frequencies to the subwoofer, blending seamlessly with main speakers and optimizing sound balance.

Video Upscaling

Video upscaling enhances and sharpens lower resolution content for optimized viewing on today's 4K or 8K screens.

Volume Level Calibration

Volume Level Calibration allows advanced users to use a sound pressure level meter at their primary listening position to calibrate each speaker to their room for theater-like sound.

Universal Remote

A universal remote can be programmed to operate one or more types of consumer electronics from various brands.

4.2 Legal and Compliance

Model No.:

- **Nakamichi DRAGON 11.4.6 Home Surround Sound System** (With Dual-Opposing 8" Subwoofers (Set of 2) and Surround Speakers)
- **Nakamichi DRAGON Home Surround Sound System** (With 12" Subwoofer - Set of 2 or more and Surround Speakers)

FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.








Class B FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorienting or relocating the receiving antenna.
- Increasing the separation between the equipment and receiver.
- Connecting the equipment to an outlet that is on a different circuit than the radio or TV.
- Consulting the dealer or an experienced radio/TV technician for help.

Hereby, Nakamichi LLC declares that the radio equipment is in compliance with Directive 2014/53/EU as well as UK Radio Equipment Regulations SI 2017 No.1206. The full text of the EU/UK declaration of conformity is available at the following internet address: <https://dragon.nakamichi-usa.com> for CE and for UK.

11.3 Legal and Compliance

 COMPATIBLE WITH 	Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.
 	For DTS patents, see http://patents.dts.com . Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS in combination with the Symbol, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and/or other countries. ©DTS, Inc. All Rights Reserved.
	The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.
	The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Nakamichi LLC is under license. Other trademarks and trade names are those of their respective owners.
	Qualcomm® aptX™ HD is a product of Qualcomm Technologies, Inc. and/or its subsidiaries. Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries. aptX™ is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries.

Use Restriction Attention in European Union, operation is limited to indoor use.

Radio Network	Frequency Bands	Transmitting Power
DRAGON 12" SW Wireless	5725 - 5825MHz	11.62dBm/14.52mW
DRAGON 11.4.6 /DRAGON 11.4.6 BP Wireless	5725 - 5825MHz	8.62dBm/7.28mW
Bluetooth	2402Hz - 2480Hz	9.63dBm/9.18mW

SECTION 12

SUPPORT

12.1 Warranty Information

LIMITED WARRANTY (U.S. Only)

Nakamichi LLC ("Nakamichi") warrants this product against defects in material or workmanship for the time periods as set forth below. Pursuant to this Limited Warranty, Nakamichi will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. In the event of a defect, these are your exclusive remedies.

Labor: For a period of one (1) year from the original date of purchase of the product ("Labor Warranty"), Nakamichi will, at its option, repair or replace with new or refurbished product, product determined to be defective. If Nakamichi elects to replace the product after this Labor Warranty has expired but while the Parts Warranty below is still in effect, it will do so for the applicable labor charge.

Parts: For a period of one (1) year from the original date of purchase of product ("Parts Warranty"), Nakamichi will supply new or refurbished replacement parts in exchange for parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

Instructions: To obtain warranty service, you must deliver the product, freight prepaid by product owner, in either its original packaging or packaging affording an equal degree of protection to the Nakamichi authorized service facility specified. It is your responsibility to backup any data, software or other materials you may have stored or preserved on DRAGON. It is likely that such data, software, or other materials will be lost or reformatted during service and Nakamichi will not be responsible for any such damage or loss. A dated purchase receipt is required.

Repair / Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of Nakamichi.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, misuse, limitations of technology, or modification of or to any part of the Nakamichi product. This Limited Warranty does not cover Nakamichi products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product.

This Limited Warranty is valid only in the United States. This Limited Warranty is valid only for Nakamichi products purchased from the following authorized retailers with a valid receipt stating date, product description and purchase price:

1. Amazon.com (under seller "Nakamichi LLC")
2. Best Buy
3. Ebay (under seller "nakamichi-usa")
4. B&H Photo Video
5. Nakamichi Official Web Store (store.nakamichi-usa.com)

LIMITATION ON DAMAGES: NAKAMICHI SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

DRAGON CONCIERGE

If you have any questions or comments, you may reach us at the following:




Visit our website at www.dragon.nakamichi-usa.com

Email us at dragonvip@nakamichi-usa.com

Phone Support: +1 (415) 888 9626 (Weekdays 10am - 6:45pm PST; Saturday 10am - 4:45pm PST)

12.2 Sound Optimization Tips

Room acoustics greatly affect your overall experience. Try these tips to maximize subwoofer performance.

Symptom	Remedy
Bass too overpowering	<p>Adjust Volume</p> <ol style="list-style-type: none">Lower the bass level.<ol style="list-style-type: none">On the remote, toggle the bass button down to adjust the level.Change EQ to Movie/Music 2 or 3.Reduce the subwoofer volume level.<ol style="list-style-type: none">Press " HOME" to access the OSD.Navigate to the Calibration tab.Select 'Advanced Sound Setup' > 'Volume Level Calibration'.Scroll down. Under 'SUBWOOFERS', press ◀ on your remote to decrease the volume of each connected subwoofer type. (Default: 7). <p>Adjust Bass Tone</p> <ol style="list-style-type: none">Lower subwoofer crossover frequency<ol style="list-style-type: none">Press " HOME" to access the OSD.Under the Audio tab, select 'Advanced Audio Settings'. Lower the subwoofer crossover frequency (default is 200Hz).Lower the volume level of Low-Frequency Effects (LFE)<ol style="list-style-type: none">Press " HOME" to access the OSD.Under the Audio tab, select 'Subwoofers Setup'.Under 'Low-Frequency Effect', lower the volume level to your preference. <p>Optimize Room Placement</p> <ol style="list-style-type: none">Loop familiar content with a consistent bass line. Try shifting your subwoofers away from the corners of your room one inch at a time and observe if bass quality improves. <p>Tip: Use a combination of these settings to suit your listening preferences.</p>
Insufficient Bass	<p>Use Corner Placement</p> <p>Place the 12" subwoofer in the front or rear corners to maximize bass output and minimize dead spots.</p> <p>Check for Acoustic Cancellation</p> <p>Each room responds differently to subwoofer placement. Try turning off one or more subwoofers.</p> <p>If the bass improves, adjust their placement.</p>

12.2 Sound Optimization Tips

Symptom	Remedy
Surround channels too loud	<ol style="list-style-type: none">1. Press SURROUND button on your remote to switch to "Dolby Surround" (or "Neural X", for DTS Content only).2. Avoid using "All Channel Stereo" when watching content with surround sound.3. Decrease the volume of side and back surrounds. Press SS- and SB- on your remote.4. Adjust surround channel volume.<ol style="list-style-type: none">a. Press "🏠 HOME". Go to Calibration tab > 'Advanced Sound Setup' > 'Volume Level Calibration'.b. Increase the volume of 'Left + Right' and 'Center' channel.
Surround channels too soft	Ensure content being played has surround sound (e.g. 5.1ch or Dolby Atmos). When playing content with weak/no surround effects, press "All Channel Stereo" on your remote. Front channels will be upmixed to the surround speakers.
Either surround channel (left or right) louder than the other	<ol style="list-style-type: none">1. If your room only has one side wall (either side),<ol style="list-style-type: none">a. Press "🏠 HOME". Under the Audio tab, go to 'Audio Setup' > 'Channel Level Volume Setup'.b. Adjust 'Front Surround Balance' to project more sound towards area with no side wall.2. If surround speakers are not placed at equal distances from listening position,<ol style="list-style-type: none">a. Press "🏠 HOME" to access the OSD.b. Under the Audio tab, go to 'Audio Setup' > 'Channel Level Volume Setup'.c. Adjust 'Surround Speaker Balance' to increase output of the surround speaker that is placed further away.3. Calibrate DRAGON to your room size.<ol style="list-style-type: none">a. Go to "🏠 HOME" > Calibration tab > 'Easy Sound Setup'. Switch between Small, Medium or Large rooms.b. For more precise calibration, go to 'Advanced Sound Setup' > 'Room Size Calibration' to manually set distances of each speaker to listening position.
Height channels too soft	<ol style="list-style-type: none">1. Adjust AHD setting: Press AHD on your remote. Set AHD to "Max".2. Adjust Height Channel Volume.<ol style="list-style-type: none">a. Press FH+ and RH+ on your remote to increase height channel volume.
Either height channel (left or right) louder than the other	<ol style="list-style-type: none">1. Adjust rear height balance.<ol style="list-style-type: none">a. Press "🏠 HOME" to access the OSD.b. Go to the Audio Tab. Select 'Audio Setup' > 'Height Effects Setup'.c. Adjust the rear height speaker balance.



12.3 Help and Troubleshooting

1. HDMI eARC / ARC – No sound or video / System switching sources erratically




Restore DRAGON's factory settings to refresh HDMI settings

A. Restoring Factory Settings ("Soft Reset")

Method 1: Without OSD

- i. Power ON DRAGON.
- ii. Press and hold  on the main unit for 8 seconds. The factory settings will be restored. The main unit will turn off when reset is complete.
- iii. After a few seconds, press  to power ON DRAGON. DRAGON will go to TV (ARC/eARC) by default.

Method 2: Via On-Screen Display (OSD)

- i. Press " HOME". Navigate to the System tab.
- ii. Scroll down to 'Restore Factory Settings'. Press  to scroll to 'Fav+Name+Room'.
- iii. Press ENTER. Factory settings will be reapplied. The main unit will power off when reset is complete.
- iv. After a few seconds, press  to power ON DRAGON. DRAGON will go to TV (ARC/eARC) by default.

If your TV was connected to another sound system via HDMI previously, perform a hard reset by following these steps to establish a new HDMI handshake.


B. DRAGON & TV Hard Reset + HDMI Connection Refresh

- i. While all source devices are on, disconnect **all** HDMI cables connected to the TV and DRAGON (including the cable that links the TV to DRAGON).
- ii. Power OFF TV, DRAGON and all source devices.
- iii. Unplug all devices from the AC outlets.
- iv. Wait for 5 minutes before plugging the TV, DRAGON and source devices back to the AC outlets.
- v. Power ON DRAGON, TV and all source devices.
- vi. While they are on, connect the TV and DRAGON via HDMI eARC/ARC.

Once the connection is established, connect other source devices one at a time.
Then, use the Perfect Device Matching Tool on the right to optimize audio settings.



2. No sound from entire DRAGON system

- i. Press the OUTPUT button on your remote. Ensure external output is set to "EXT OFF".
- ii. Ensure DRAGON's volume is set to an audible level. Press  on the main unit. If sound is output from all speakers, the issue may be with the device connected to DRAGON.
- iii. Check the volume of your external device.
- iv. Check all cable connections connecting your device to DRAGON.
- v. Try a soft reset, followed by a hard reset + HDMI Connection Refresh (See Section 1).

12.3 Help and Troubleshooting

3. TV is not sending sound from streaming apps/devices connected to DRAGON

- i. Ensure DRAGON is connected to the TV via the designated HDMI eARC/ARC ports on both devices. Use the HDMI 2.1 cable included in box.
- ii. HDMI eARC and HDMI - CEC may need to be enabled from your TV settings. Check your TV documentation or visit the website provided on the right to view recommended audio settings for your TV.

For brand specific TV audio settings, scan the QR code or visit: bit.ly/dragon-best-sound



4. Intermittent audio cut out or no sound

- i. Perform a soft reset. See 1A (above).
- ii. Disconnect the source device that is having issues from the main unit or TV. Unplug the source device from the AC outlet for 5 minutes before powering it back on.
- iii. While the source device is on, connect it to the main unit or TV.
- iv. Get the best audio performance using recommended audio settings (bit.ly/dragon-audio-settings).

5. No sound from wireless subwoofers or surround speakers

A. Ensure power is connected

Check that the power cord is inserted firmly into the speaker/adaptor power sockets and AC outlet, and that power is being sent to all speakers. Ensure that the subwoofer's physical power switch is toggled to "ON". Then, power on the main unit.

B. Check wireless connection

- i. With the main unit powered on, check if the LED indicator on the rear of the subwoofer and surround speakers are lit with solid blue light. If the LED indicator for any wireless speaker is flashing or turned off, Perform the pairing procedure in Section 10.2 or 10.3, pg 72 to 76.
- ii. If a wireless speaker fails to power on or connect, disconnect power to the affected wireless speakers for 5 minutes, and retry this procedure.

C. Soundcheck

If all wireless speakers have a solid blue light while DRAGON is powered on, press **□** (Demo) on the main unit. If sound is being output from all speakers, there are no issues with the wireless connection between the speakers.

If the sound is intermittent, see steps in the next section.

12.3 Help and Troubleshooting

6. Subwoofer or surround speakers sound abnormalities

Cut out / crackling / popping / distortion: When there is a 5.8Ghz wireless device in close range to DRAGON that is using the same frequency (e.g. Home Wi-Fi router), the main unit's wireless connection to the subwoofer and surround speakers may be affected. This can be resolved by adjusting the following settings:

A. Remove any obstructions or potential sources of interference.

- i. Remove any obstacles between the main unit and the affected wireless component.
- ii. Other devices sending radio frequency signals in proximity may interrupt the connection. Where possible, keep your speakers away from such devices.
- iii. Bring the subwoofers and surround speakers closer to the main unit. See Section 2.1 - 2.2 for recommended speaker placement.

B. Change DRAGON's wireless channel

- i. Press the "HOME" button on your remote. Navigate to the System tab.
- ii. Go to 'Subs + Surr Wireless Freq' and change to either of the following:

Selection	Wireless Frequency (GHz)	Frequencies Occupied ⁹
Default	5.8 GHz	Channels 149 - 163
Auto 1	5.2 GHz	Channels 32 - 50

- Notes:
- 1. The default channel is optimized for avoiding wireless interference from external devices. If there is no audio popping /crackling /cut out from subwoofer(s) or surround speakers, it is recommended to keep using the default channel.
 - 2. Changing the radio frequency channel and strength may affect the performance of other near wireless devices (e.g. wireless LAN) using the same frequency bandwidth.
 - 3. DRAGON's wireless transmission will automatically analyze and use smaller range of frequency channels mentioned for the best wireless performance.

C. Adjusting your home's wireless router

Visit our helpdesk to view recommended settings for your Wi-Fi router and optimize the performance of DRAGON's wireless communication. Scan the QR code on the right.

Wi-Fi optimization guide



D. Change DRAGON's wireless strength

- i. Press the "HOME" button on your remote. Navigate to the System tab.
- ii. Go to 'Wireless Freq Strength', change '2: Default' to '3' or '3+'. (See Section 6.5A, pg 60)
- iii. Play content. Audio playback from subwoofer and surround speakers should be optimized.

12.3 Help and Troubleshooting

7. No surround sound or surround sound volume is lower than expected

- i. Ensure your device is sending surround sound to DRAGON. Only devices connected via HDMI or optical can send surround sound to DRAGON. Bluetooth transmissions are limited to stereo sound.
- ii. When using Bluetooth or Aux-In to play stereo content, press ALL CHANNEL STEREO to send stereo sound to the surround speakers.
- iii. Press SS+/SB+ on your remote to increase the volume of surround effects.

8. Increase the bass output

- i. Experiment with subwoofer placement (See recommendations in Section 2.1, pg 17).
- ii. Verify the power connections of both subwoofer units. Power on the system and ensure the LED indicators on both subwoofers are lit with a solid blue light.
 - a. If any subwoofer displays a continuously flashing blue LED, perform the subwoofer pairing procedure (Section 10.2, pg 72).
 - b. If the bass output from any subwoofer is intermittently cutting out, adjust the wireless frequency channel or strength settings (Section 6.5A, pg 60).
- iii. Press SUB+ on your remote and ensure all subwoofers are active. Move the Bass button up on your remote to increase bass output.
- iv. Press "🏠 HOME" to open DRAGON's OSD. Navigate to Calibration tab > 'Volume Level Calibration'. Scroll down and ensure the level for each subwoofer is set to at least 7 (default).
- v. Certain content may be recorded with weak bass effects. Try playing content that is encoded with 5.1 channels or above.

9. Remote does not work



- i. Replace the batteries with new ones.
- ii. Try re-pairing the remote control to the main unit (Section 10.4, pg 77).
- iii. Use the remote within reasonable proximity to the main unit.
- iv. Ensure that the remote is in Bluetooth mode. When operating in infrared mode, it is important to point the remote directly at the main unit for optimal response.

10. Button presses on the remote are not consistently registered or take a few seconds to be acknowledged

- i. Remove batteries from your remote. Wait for a few minutes before re-installing them.
- ii. Re-pair your remote with the main unit (Section 10.4, Pg 77).
- iii. Replace the batteries with new ones for optimal performance.

12.3 Help and Troubleshooting

11. My device cannot connect to DRAGON via Bluetooth

- i. DRAGON is only able to playback content from a connected device when it is set to BT Mode. Press  on your remote to switch to it.
- ii. If DRAGON's LED display shows BT without blinking, this indicates that another device is connected to DRAGON. Press and hold  until BT starts flashing. DRAGON is now ready to pair with a new device.
- iii. If your device is still unable to connect to DRAGON, instruct the source device to forget the existing connection "DRAGON". Restart the device and try pairing it to DRAGON again.

12. Sound drops out when connected via Bluetooth

- i. Some devices can cause radio interference if they are located too close to the main unit. e.g. microwaves, wireless routers, telephones, computer peripherals etc.
- ii. When your Bluetooth-connected device moves too far away from the main unit, it can result in audio dropouts.
- iii. If the main unit is located near metal furniture or has obstructions between it and your device, the sound may drop out. Check your installation environment.

13. The firmware upgrade could not be completed / The main unit displays "FAIL 558XXXXX" during the firmware upgrade process

- i. Your USB drive is either not compatible or contains a firmware file that is incomplete. Try using a different USB drive (USB 3.0 drive with capacity of less than 128GB, formatted in exFAT).
- ii. Download a fresh copy of the firmware from our website (support.nakamichi-usa.com/dragon/firmware-upgrade). Delete any previously downloaded firmware file from your USB drive and replace with this copy.
- iii. Turn off DRAGON, then unplug the AC power supply from the main unit. Insert the replacement USB drive, reconnect the power supply, and turn on DRAGON. Upgrade should resume.
- iv. Once firmware upgrade is complete, reset the system (See Section 9.2, pg 69).

14. My subwoofers are identified with non-sequential digits (e.g. 1.3 / 2.3 / 2.4)

This is normal and will not affect system operation.

12.4 Share Your Experience!

Need More Assistance?

The DRAGON Concierge can assist with pairing subwoofer(s) to your system and optimizing their performance.

Should you need any assistance, please contact us.

☎ : +1 (415) 888 9626

✉ : dragonvip@nakamichi-usa.com

Operating Hours

- 10AM to 6:45PM PST Weekdays
- 10AM to 4:45PM PST Saturday



WhatsApp
DRAGON Concierge



DRAGON Support

Join the Facebook Group

Join fellow owners for placement and specific device recommendations.



bit.ly/Nakamichi-FB



bit.ly/Nakamichi-IG

Leave a Review!

If you've been enjoying your DRAGON system with 12" subwoofers, help others make an informed decision by leaving a review!

Your thoughts will go a long way in supporting our mission of redefining audio expectations.



bit.ly/DRAGON-review

HELPDESK

bit.ly/dragon-helpdesk



SPEAK TO OUR DRAGON CONCIERGE BASED IN CALIFORNIA

✉ dragonvip@nakamichi-usa.com

☎ (415) 888 9626



(Weekdays 10am - 6:45pm PST; Saturday 10am - 4:45pm PST)

NAKAMICHI USA. ALL RIGHTS RESERVED.